


WiFi Access Control & Reader

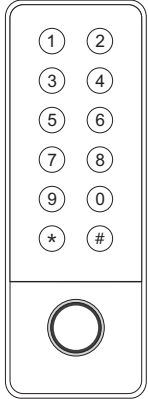

User Manual

INTRODUCTION

This device is a WiFi based Touch Key Access Controller & RFID Reader. People can install the mobile APP(Tuya Smart or Smart life) to easily access the door with their smart phone. The APP supports 500 mobile users, and can manage 600 users (Fingerprint/ Card/ PIN) maximum by the APP.

APP OPERATION

Here are just a few steps to get you started.


1, Free APP Downloading

Search Tuya Smart or Smart life on Google Play or APP Store

2, Make sure WIFI works on your mobile phone.

1, Register & Login

(Make sure the registered email is legal and valid, so that you can recover your password once forgotten. Mobile Number is for China Mobile ONLY)

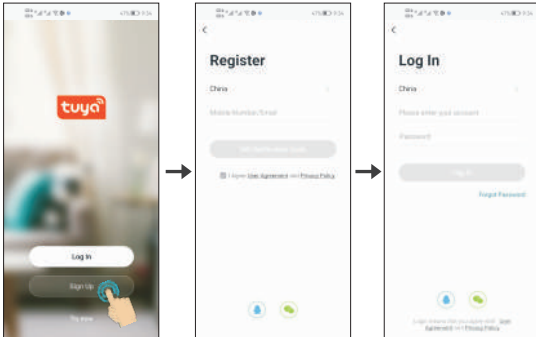



You will get a verification code in your mail box.

01

2, Add Device


You can add device by clicking Add Device or clicking + on the top. (It is suggested to turn on the Bluetooth, it's easier to find the device and faster to add device)

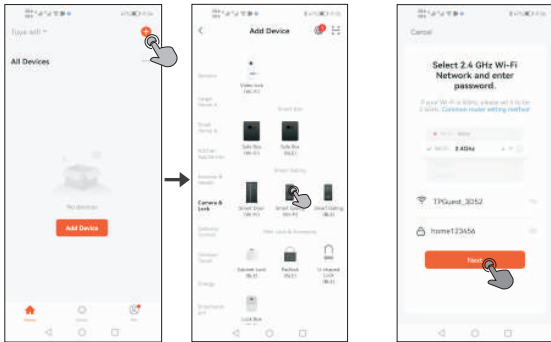

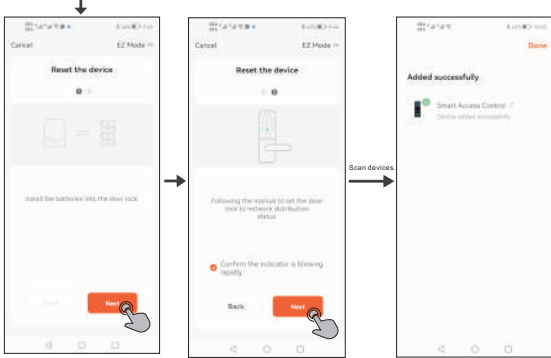


02

Note: To better manage the devices and family members, you will need to create a HOME before you begin to manage this device.

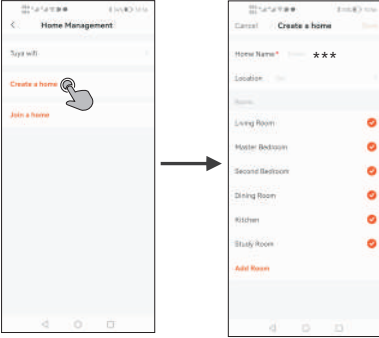

Set machine status and parameters

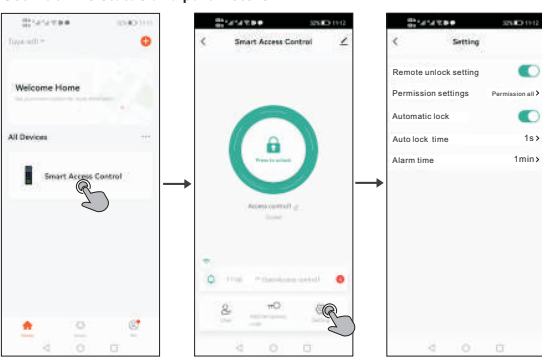


03


3, User Management

3.1 Add Administrator (Members)

Note: The members that you shared to must register the account first

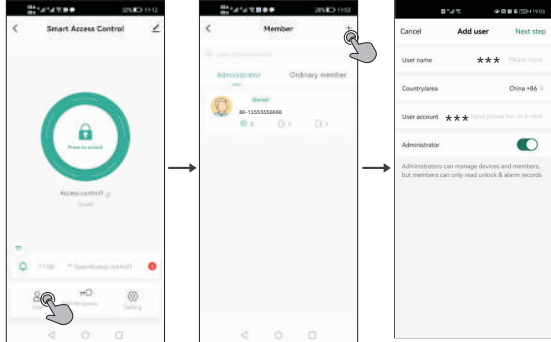

3.2 Add Ordinary member (Members)

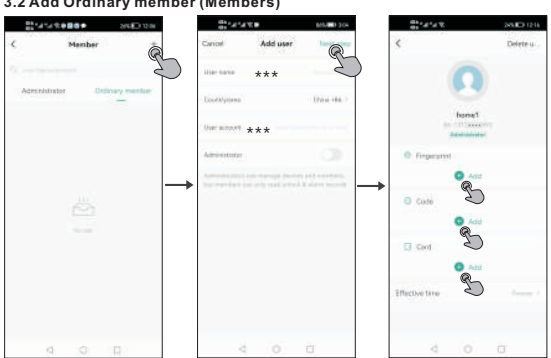


04

Remark: When adding members, the Owner (Super Master) can decide to add the user as Admin or Ordinary member.

3.3 Manage Members


Owner(Super Master) can decide effective time (Permanent or Limited) of the members.

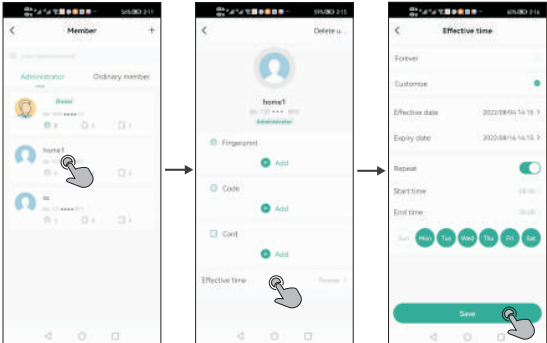


Same operation for Ordinary member

05

3.4 Delete Members

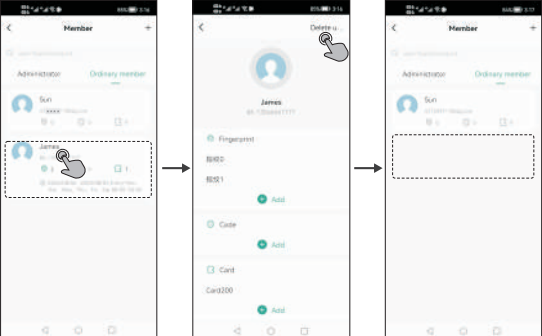

3.5 Add Users (Fingerprint/ PIN/ Card Users)

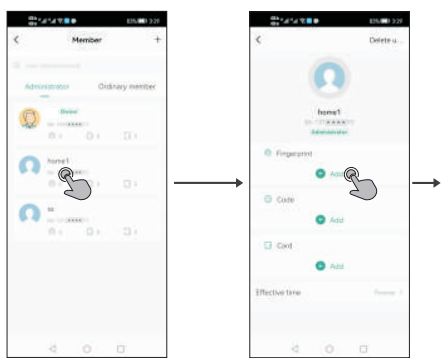

06

Simplified Instruction

APP Downloading and Installation

Register & Login

Add Device

Open the door


1

2

3


4

How to add fingerprint

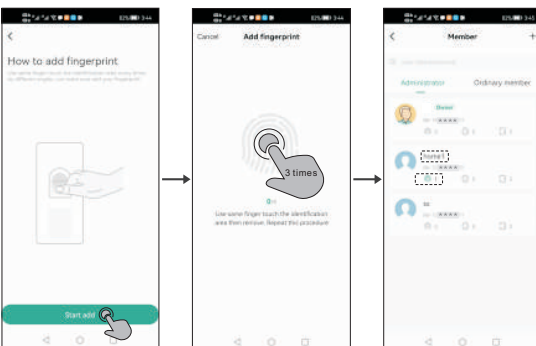

For adding PIN & Card users, same operation as adding Fingerprint user.

3.6 Delete Users (Fingerprint/ PIN/ Card Users)

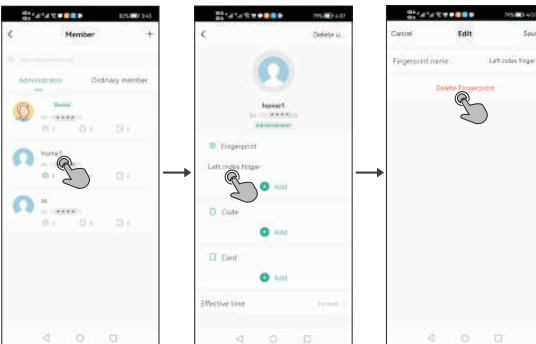

For deleting PIN & Card users, same operation as deleting Fingerprint user.


07

4, Temporary Code


The temporary code can be shared by SNS tools (Skype, Whatsapp, Wechat...) or email to the guest/ users.

For Temporary Code, there are two types of it.

Cyclicity: For example, valid at 7:00 am- 5:00 pm every Monday- Friday during September - December.

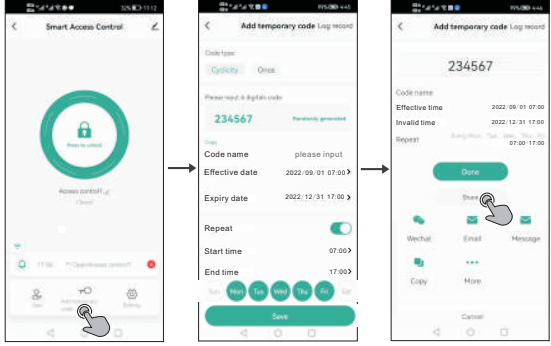


Once: One-time code can be valid in 6 hours and can be used only for once.

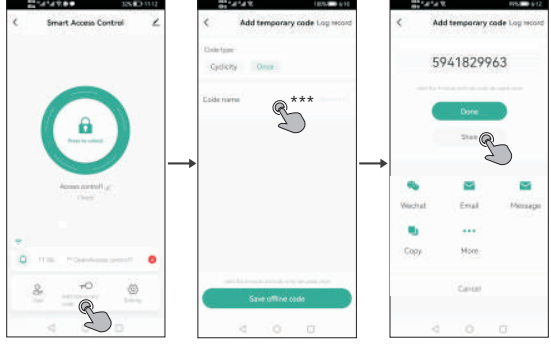

08

4.1 Edit Temporary Code

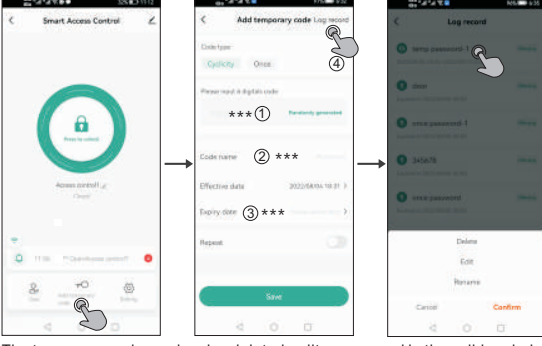

The temporary code can be also deleted, edit or renamed in the valid period.

5, Setting

5.1 Remote unlock setting

Default is off. When added the device first time, it will ask to turn on. Once turn off, all the mobile users will not be able to access the lock by APP.

5.2 Permission settings

Default is Permission all. can be set to admin.

5.3 Automatic Lock

Automatic Lock on: Pulse Mode (Default).

Automatic Lock off: Toggle Mode

5.4 Auto Lock time


Default is 5 seconds.

It can be set from 0-100 seconds.

5.5 Alarm time


Default is 1 minutes.

It can be set from 1-3 minutes.

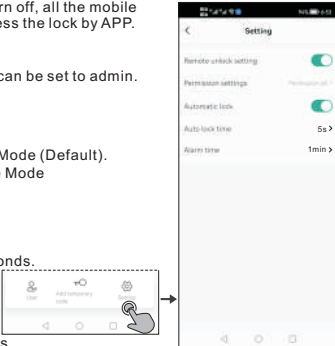


09

6, Log (Including Open History and Alarms)

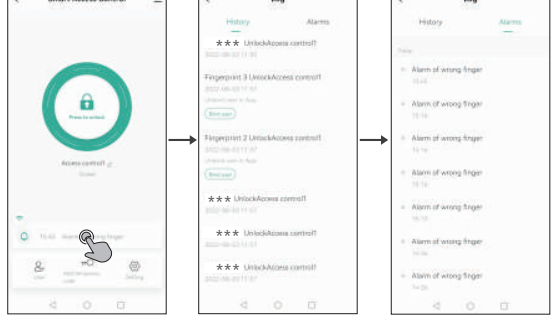

7, Remove Device

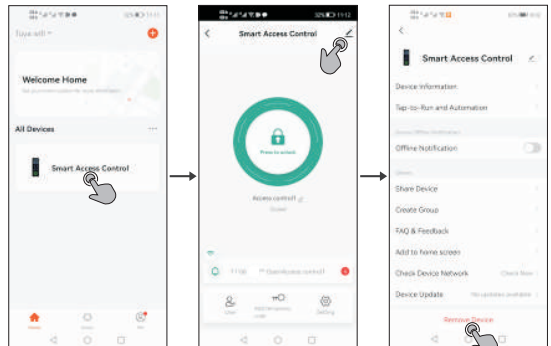

Note: Disconnect is just removing the device from the APP. The users (card/ fingerprint/ code) are still retained. (If Super Master Disconnection, all other members will have no access to the device)

10

8, Member Management


Note: The first to add the device is the Home Owner (Super Master)

Authority	Ordinary member	Administrator	Home Owner (Super Master)
Open the door	Yes	Yes	Yes
Member Management	No	Yes	Yes
User Management	No	Yes	Yes
Ser Users as Admin	No	No	Yes
View All Records	No	Yes	Yes
Set Relay Time	No	Yes	Yes

9, Door status check

The door status can be checked by the mobile. If the door unlock or forced to open, the lock icon of mobile APP is orange. (like pic1). The lock icon of mobile is green when the door closed (like pic2).

This function is available only if there is door contact connected with the device. If there is no need to check the door status, please connect the brown wire and black wire of the device, the lock icon will be always green. (like pic2)

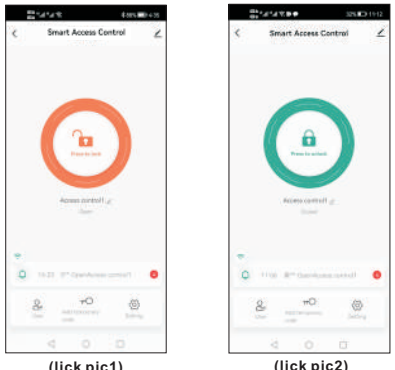

(lick pic1)

(lick pic2)

11

10, Smart phone and device binding, unbinding

Programming Step	Keystroke Combination	LED
Enter Program Mode	* Admin Code #	Red shines
WiFi quick binding	11# 2# (Factory Default)	Orange
AP connection	11# 3#	bright
WiFi unbinding	11# (Admin Code) #	Red bright
Exit Program Mode	*	

Note: 1.WIFI unbinding: with this operation, the device will disconnect with all the smart phones, the phone can't control the device at the time.

2. WiFi quick binding: this operation is for reconnection after the device unbinding. Connect the smart phone and device, then operations can be done on your phone.

12