


GPSport 245

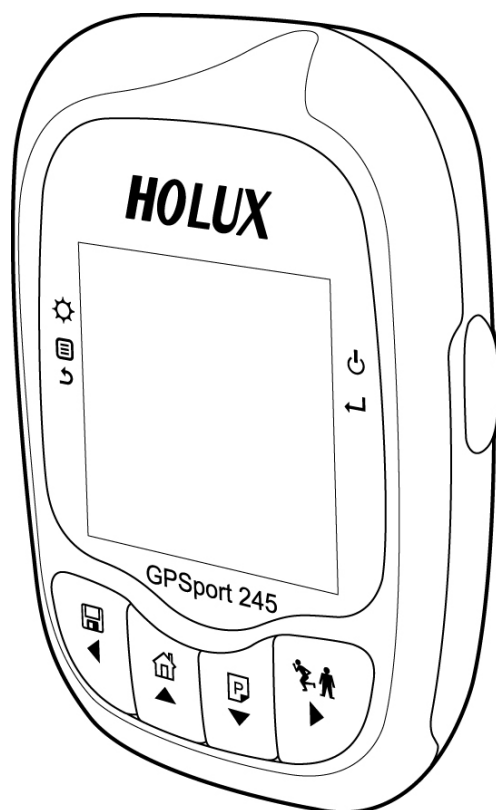

User's Guide

Safety Precautions

- Use the power adapter included with the package, using power adapters other than the one provided will result in malfunction and could prove dangerous.
- Do not use the power adapter in a wet environment. When hands and feet are wet, do not touch the power adapter.
- While using the power adaptor ensure that the area is well ventilated. Do not let paper or other material cover the power adaptor, as this will interfere with cooling. Do not use the power adaptor whilst it is in a bag.
- Do not attempt to repair the device. If device is damaged or is in a wet environment, replace the device immediately.
- This device is waterproof (meets IPX-6 standard) but not protected against water immersion.

Warranty Information

The GPSport 245 is warranted to be free from defects in material and functions for a period of one year from the date of purchase. If there is a product failure of within this period (under normal conditions), a replacement will be provided at no charge to the customer.

Copyright Information

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any mean, without the express written permission of Holux Technology, Inc.

Copyright© 2008 Holux Technology, Inc. All Rights Reserved.

Federal Communications Commission (FCC)

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning

This equipment must be installed and operated in accordance with provided

instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Table of Contents

GETTING STARTED	1
FEATURES.....	1
BUTTONS	3
ACCESSORIES.....	5
CHARGING THE BATTERY	6
<i>Using the AC Charger</i>	6
INSTALLING BIKE MOUNT	7
CONNECTING TO A PC.....	9
DRIVER INSTALLATION	10
USING THE GPS	13
TURNING ON THE SYSTEM	13
TURNING OFF THE SYSTEM	13
MENU	13
ON SCREEN DISPLAY	13
STATUS ICONS.....	17
FUNCTIONS AND OPERATIONS.....	19
INITIAL SETUP.....	32
QUICK SETUP	19
HISTORY	20
ALERT.....	22
CALORIE	24
SETTING	25
<i>General</i>	25
<i>System</i>	27

TROUBLESHOOTING 35

SPECIFICATIONS 38

Getting Started


Congratulations on purchasing the GPSport 245. The GPSport 245 is a compact, lightweight device with GPS finder and calorie calculation designed for sporting use.

Features


- GPS positioning
- Auto flip page
- Auto power off
- Support Finder
- Speed meter that simulates an analog meter
- 3 Sport modes for calorie calculation
- Auto Log function starts log as soon as the satellite signal is fixed
- One touch POI recording
- Multi-language support
- Support both metric and imperial unit
- Support time zone setting
- Support both 12:00 and 24:00 time format

Unit Overview


Front View

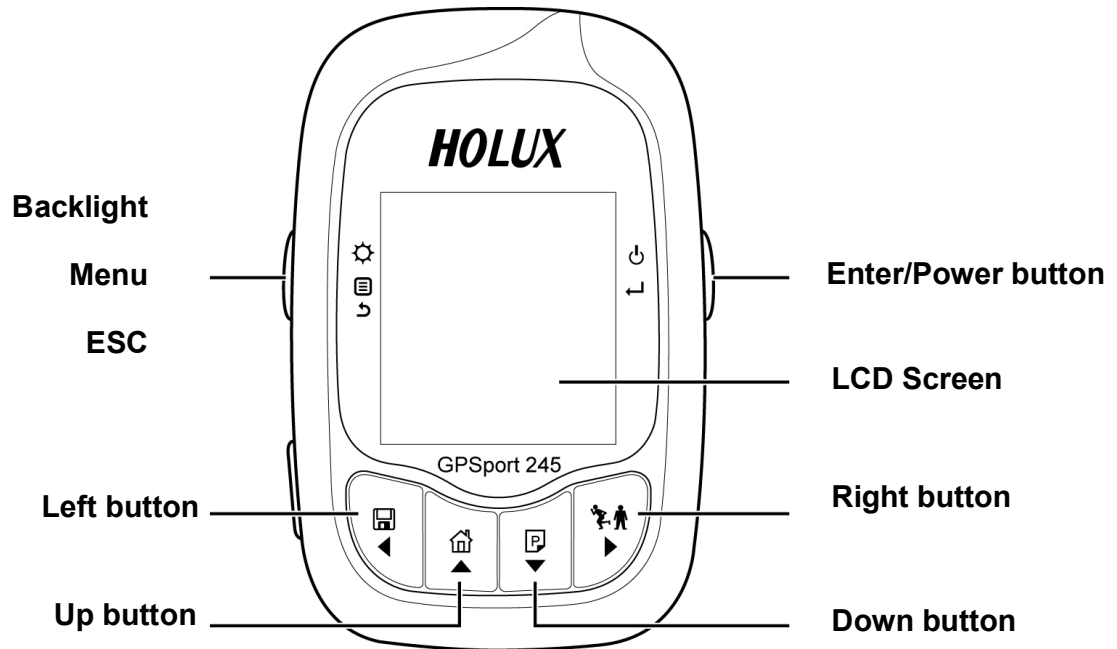

Rear View

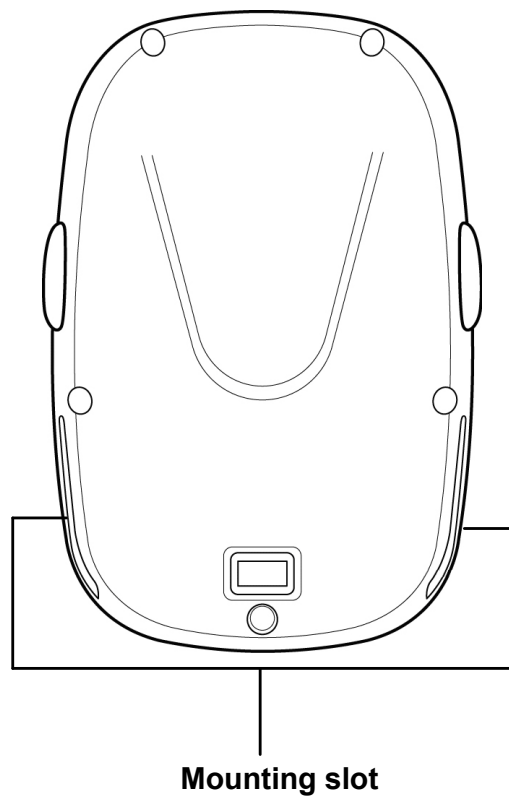

Left View

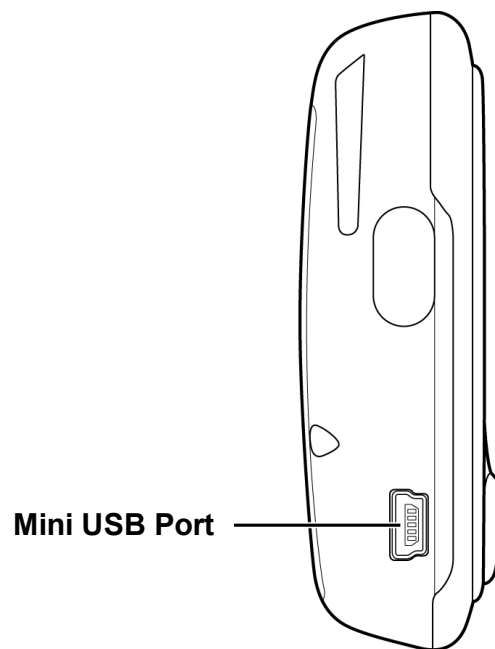

Buttons






Use the Buttons for basic functions.

Name	Icon	Function
Enter/Power button	 	Inputs commands or turns the unit on and off.
Backlight Menu ESC	  	Activates the backlight, main menu or exits the submenu.
Left button/ Save & Clear	 	Press to move the cursor to the left. Save track logs into history & clear main screen data.
Right button/ Start & Pause	 	Press to move the cursor to the right. Press to start the device when power is off; Press to pause when power is on.
Up button/Finder	 	Press to move up within the menu to highlight an item or enter Finder function.

Down button/page		Press to move down within the menu to highlight an item or flip pages to display navigation information.
---------------------	---	--

Accessories


Check the box for the following supplied accessories. If any is missing, contact your supplier immediately.
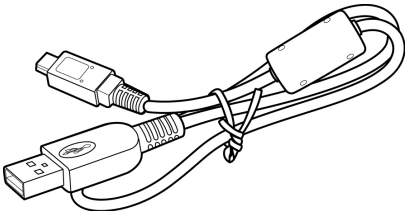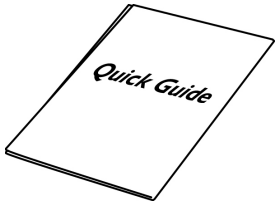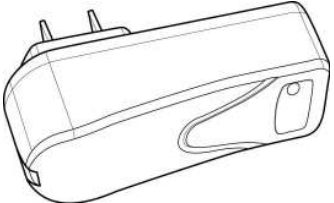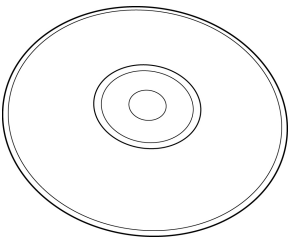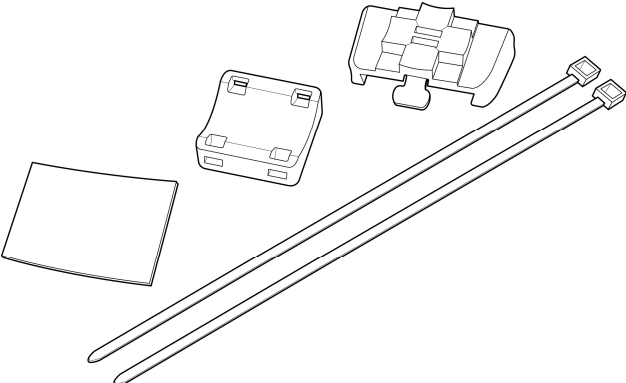
<i>GPSport 245</i> 	<i>USB cable</i> 
<i>Quick Guide</i> 	<i>AC adapter plug</i> 
<i>Warranty Card</i> 	<i>CD Rom</i> 
<i>Bike mount kit</i> 	

Charging the Battery

Using the AC Charger

1. Plug the mini USB plug of the AC charger into the mini USB port on the top of the handset.
2. Plug the AC charger into a wall outlet.

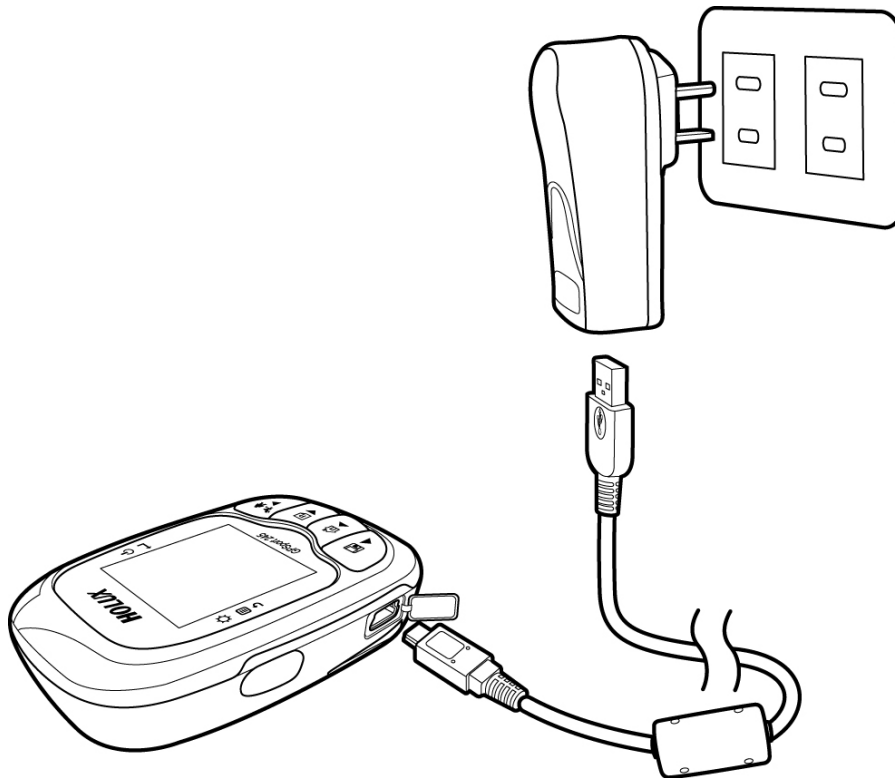


When charging, the Power indicator shows . After charging is complete, the Power indicator shows .


Installing Bike Mount

You can install the bike mount and the GPS on the left or right side of the handlebar or on the stem.


1. Attach the bracket to the bracket holder.

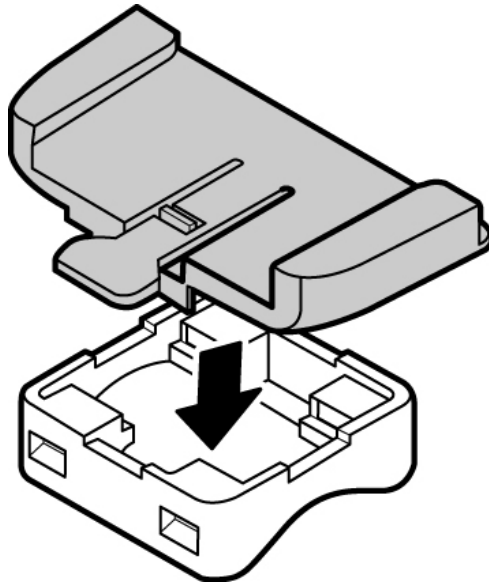


2. Thread the two cable ties through the slots of the bracket holder.

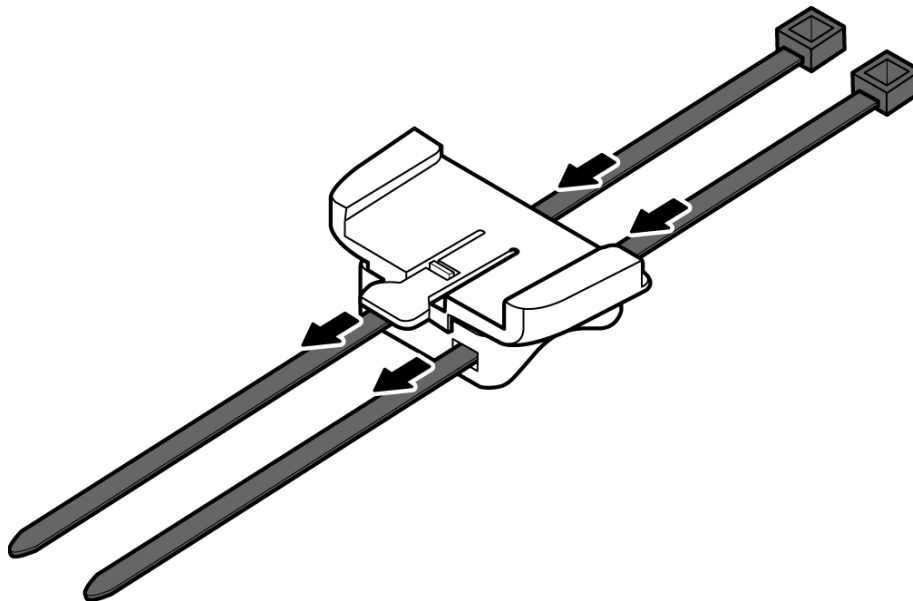

3. Place the rubber pad under the bike mount and attach the bike mount securely to the bike stem using the two cable ties.

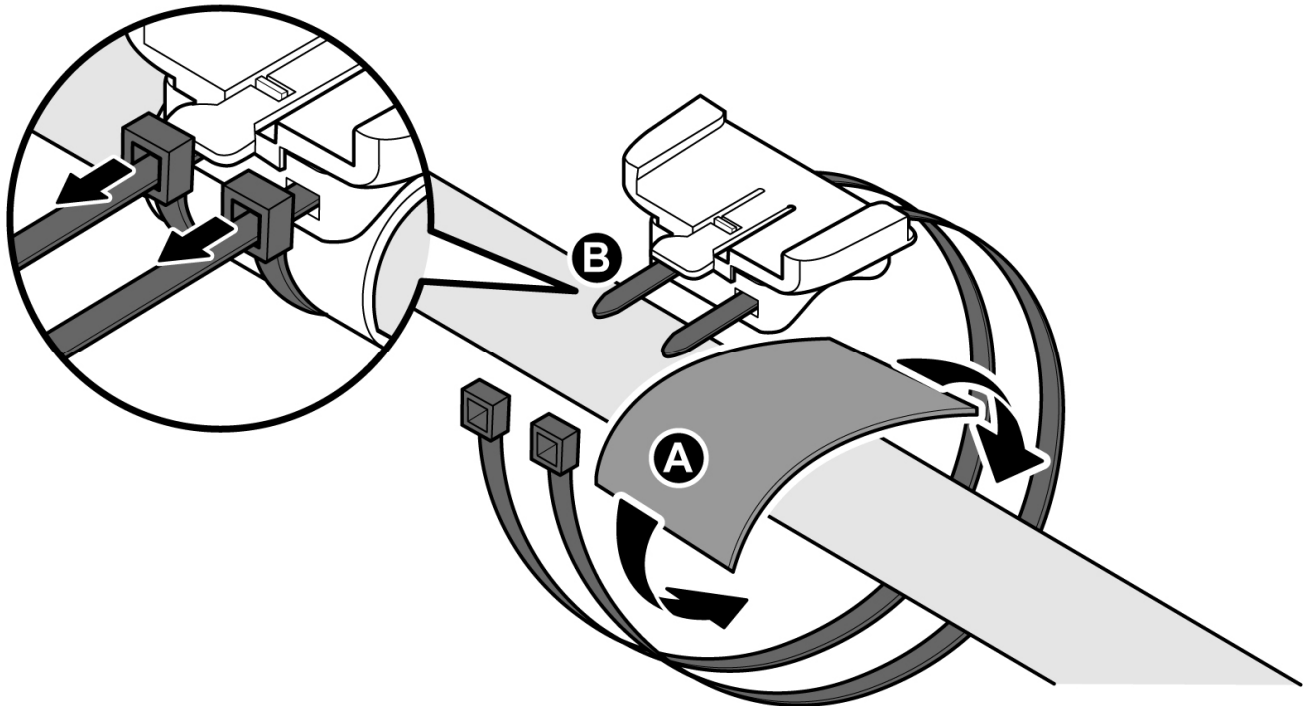


4. Slide in the GPS on top of the bike mount until it snaps into place.

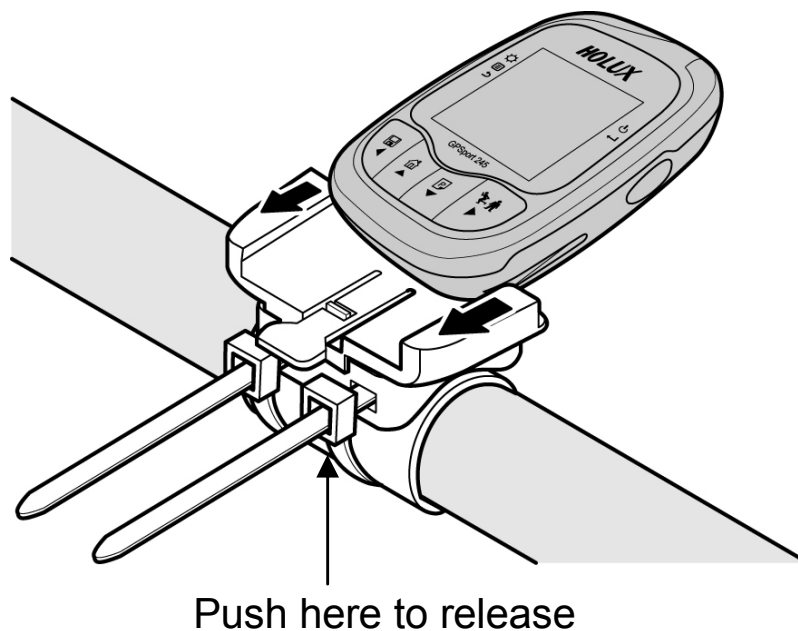

※ Cable ties are reusable


Connecting to a PC

1. Connect the mini USB plug (smaller) of the USB cable to the mini USB port on the top of the system.
2. Connect the USB plug (larger) or the USB cable to a USB port on your computer.

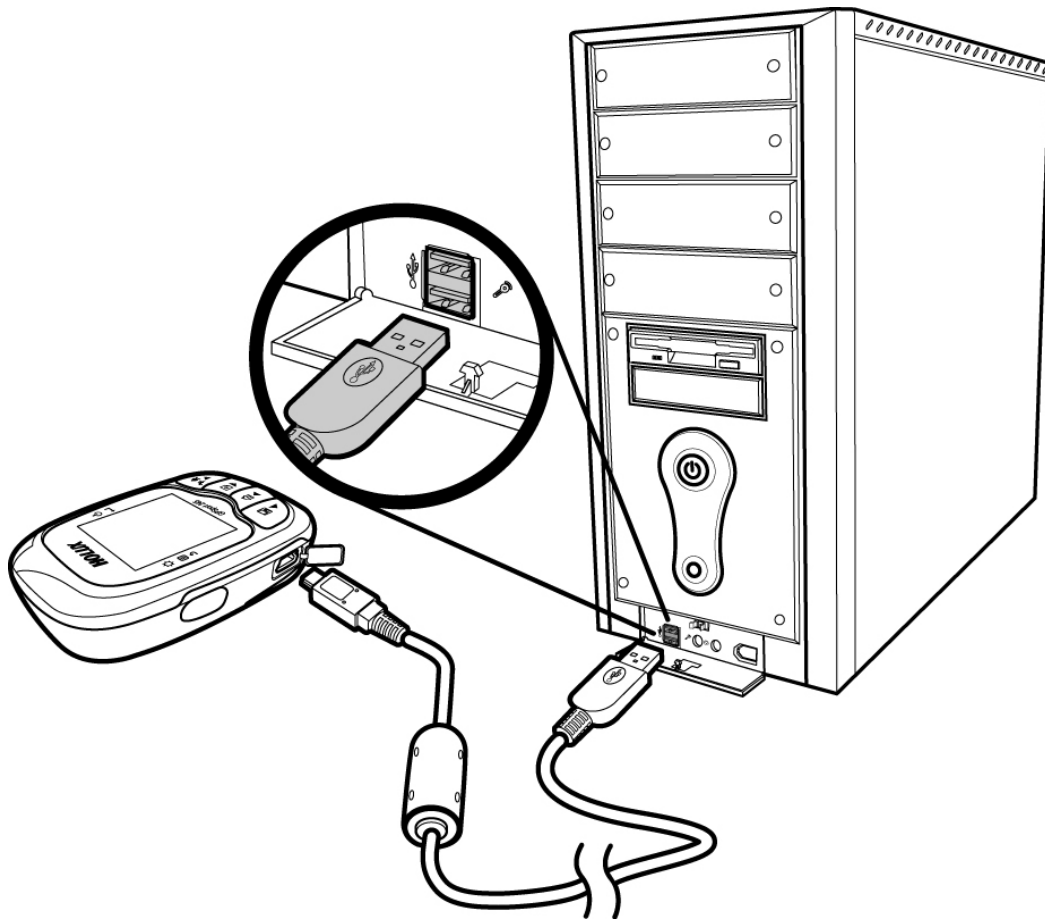


Driver installation

1. Insert the provided installation CD into the computer's CD drive.
The introductory screen appears automatically. If the screen does not appear, open the Autorun.exe file on the CD.

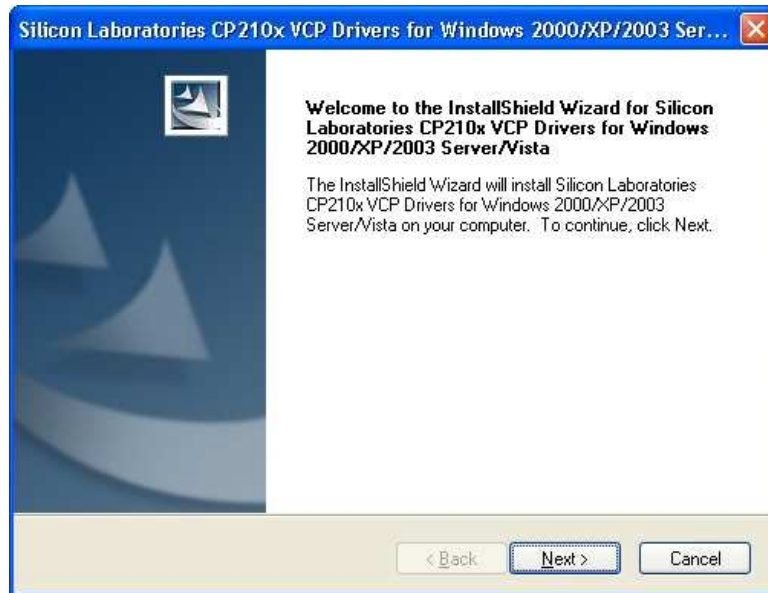


2. Click Next to begin the installation. The License Agreement screen opens.

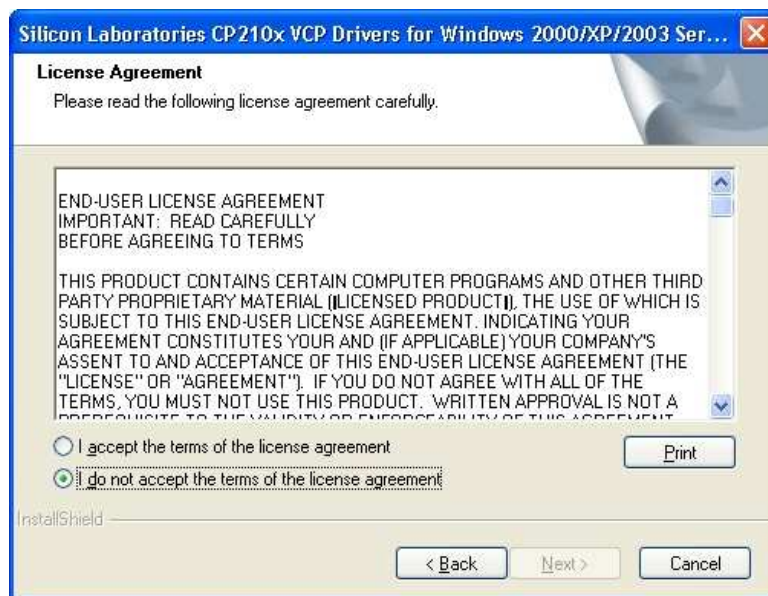


3. Read the agreement, click I accept the terms of the license agreement, then click Next. The Destination Folder screen opens.

4. To install the driver in the default location, click Next. The Ready to Install the Program screen opens. Or, to change the location, click Change, type the location, then click Next. The Ready to Install the Program screen opens.

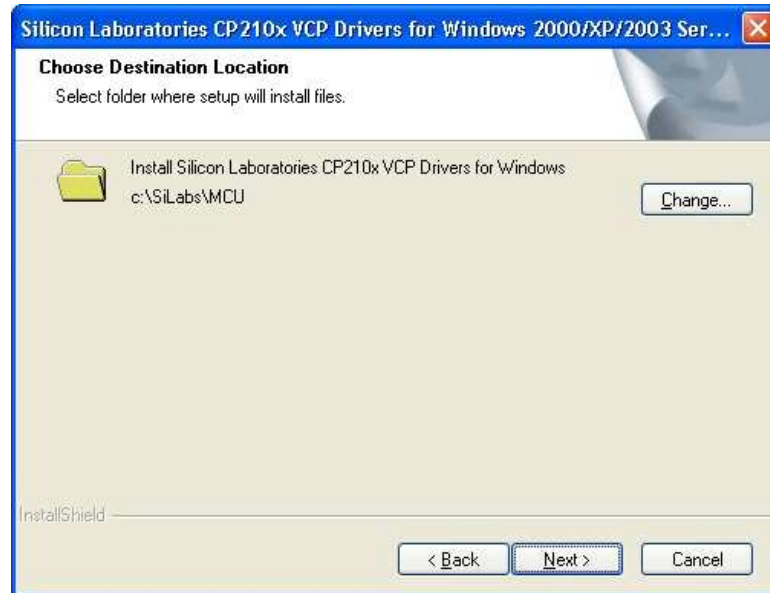

5. Click Install to continue installation. The Driver Installer screen opens.

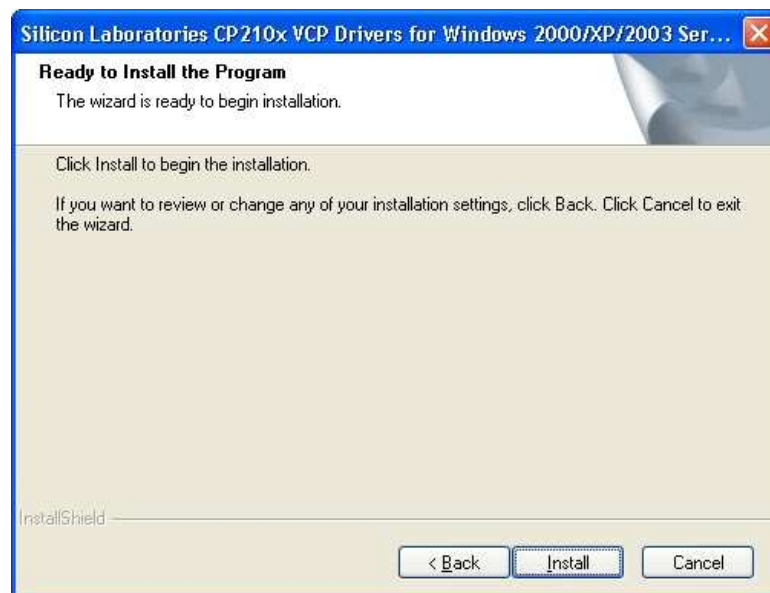


6. Click Install to start driver installation or click Change Install Location to change installation folder.



7. Installation is done. Click OK to continue.



8. Click Finish to exit the wizard.

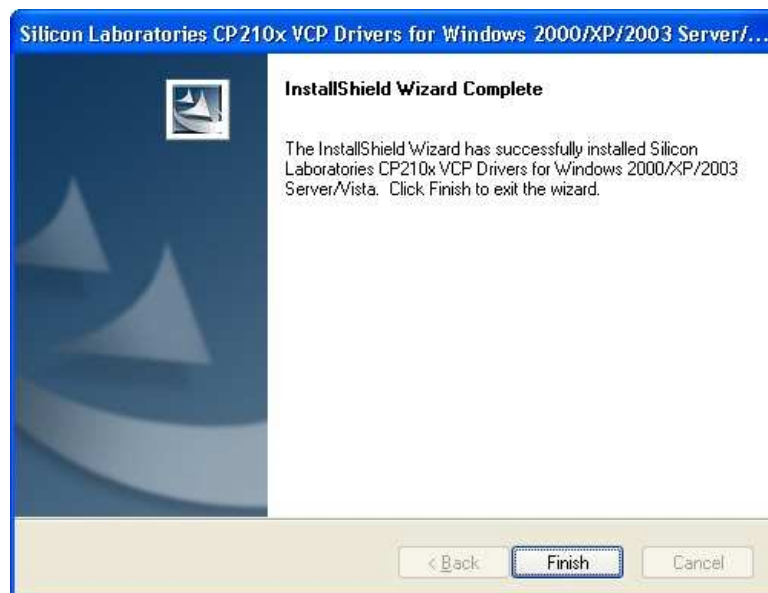

Using the GPS

Turning on the System

Press and hold the Power button until the opening screen appears on the LCD screen.

Turning off the System


Press the Power button until the LCD screen turns off.

Menu

This section explains how to open and navigate the menu. Press the Menu button to open or exit the menu.

Main Menu: the Main Menu consists of 5 options. Use the Up/Down button to move to the option and press Enter to enter the submenu.

Submenu: press the arrow button to move up, right, down, or left within the menu to select an item or adjust an item and press Enter to accept the selected item.

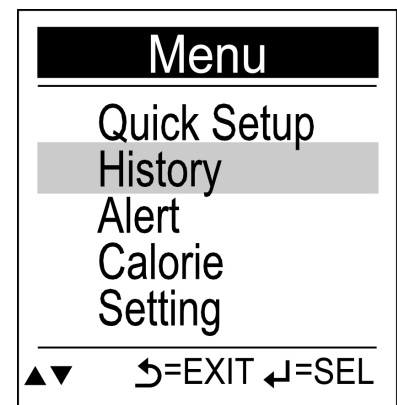


On screen display

The on-screen display changes to show different navigation information when you flip the pages by pressing the page button or by enabling the automatic flip function.


Meter: displays speed meter that simulates an analog meter that are commonly seen in most vehicles.



Speed: displays your maximum and average speed.

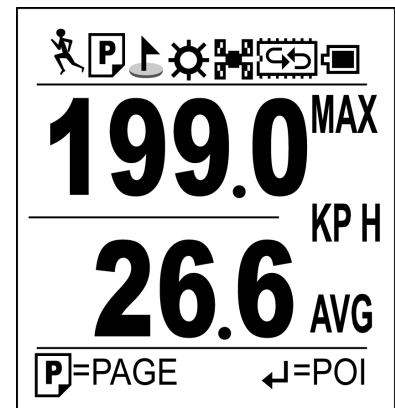


Distance and time: displays your lap distance and time.

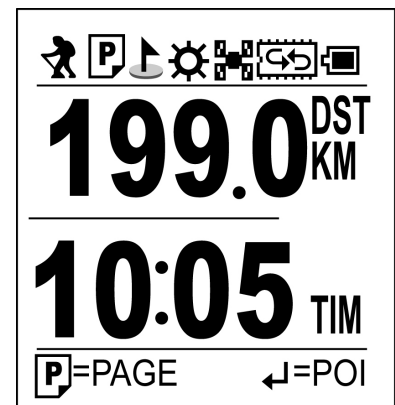

Altitude: displays altitude variation.




Calorie information: displays lap calorie and today calorie consumed.

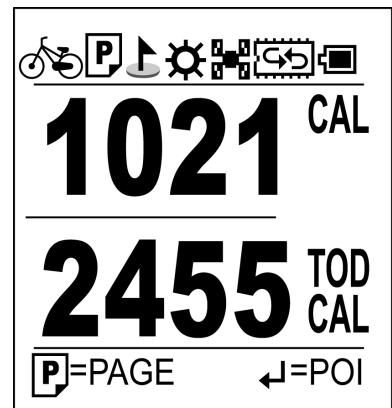



Finder Function: press the Finder button to display the direction and the distance of your start point.

Users can use the Finder function as a Geocaching tool. The Finder shows you the distance and direction of the hidden geocache.

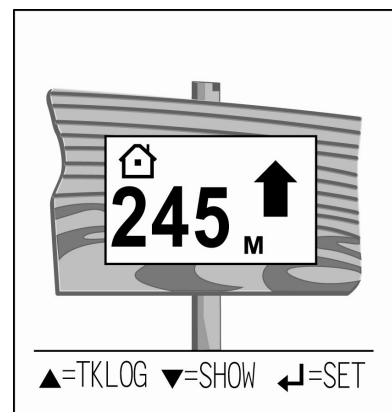



1. Press  ▼ to show the point.

2. Press ←J to set up a new point.

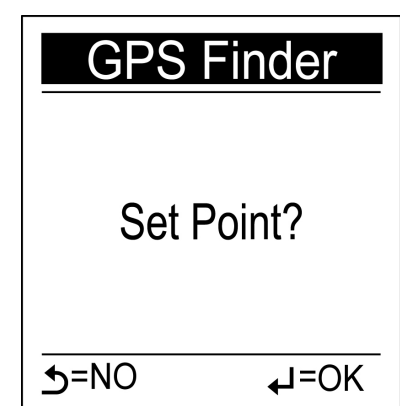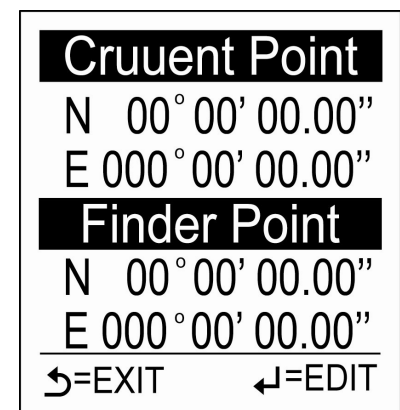


- Point

press  ▼ to show current point and Finder point.

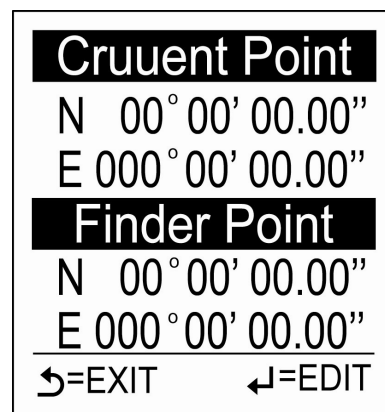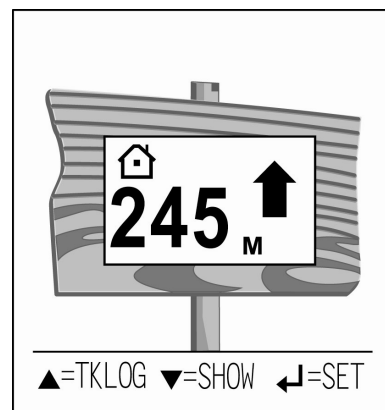

Press the ↵ to edit a location you want to find.

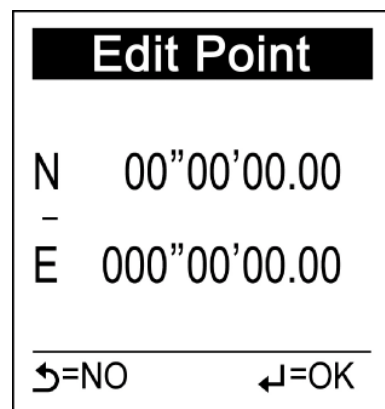

Status icons

Status icons show sport mode, auto flip page, POI, backlight, satellite status, memory mode, and battery information.



Sport mode for calorie calculation. It also indicates that Log is started. When sport mode icon disappeared, the Log is stopped or paused.

Sport mode icons:



indicates Biking mode



indicates Running mode



indicates Walking mode



Vehicle mode

POI icon:



indicates that POI has been recorded; it will be on for five seconds and then disappear

Backlight icon:



indicates backlight switch is on

Satellite mode icons:



indicates satellites is fixed

 indicates the device is trying to fix the satellites

Memory status icons:

 Memory mode: indicates the memory is in overwrite mode.

 Full stop mode: indicates the remaining memory capacity.

Battery status icons:

 indicates battery is in full status

 indicates battery is in charging status

 Indicates battery is done charging

 Battery low message appears every 5 minutes. Press any key to disable the alert.

Functions and Operations


Read this section to learn how to set up and use the GPS.

Quick Setup

User-friendly Quick setup function allows you to quickly setup most common settings. Press the Menu button to enter Main Menu and choose Quick Setup to begin setup. Q1. Sport Mode setup appears when you begin.

Sport Mode:

1. Use the Up/Down button to move to the desired mode.
2. Press the Enter button to confirm and save.
3. Q2. Weight setup appears.

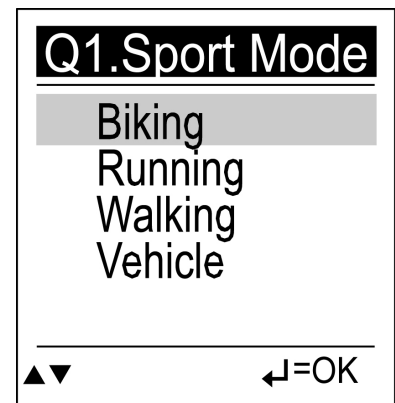


Weight:

1. Use the Left/Right button to move the cursor to the digit you want to edit.
2. Press the Up button to increase value or the Down button to decrease value.
3. Press the Enter button to confirm and save.
4. Q3. Odometer setup appears.



Odometer:

1. Press  or  to move to the odometer you choose.
2. Press the Enter button to confirm and save.
3. Quick setup is now completed. Press Enter to start.

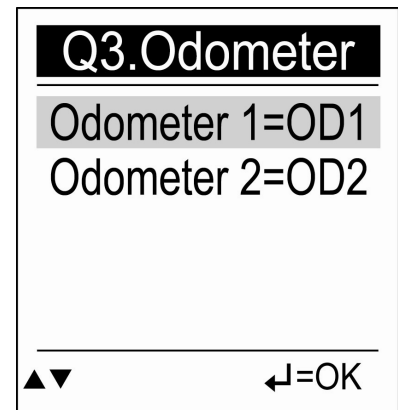


History

History function allows you to review log status for distance, time, maximum speed, average speed, calorie burned, and altitude variation. Maximum 10 records can be saved in device memory.

To review history:

1. Press the Menu button to enter Main Menu.
2. Use the Up/Down (▲/▼) button to view the log change by day.
3. Press the Enter (▶) button to view next record.

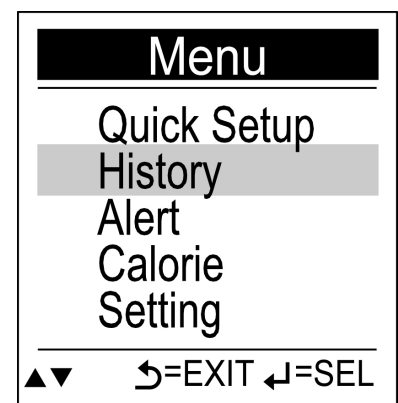

Display Odometer 1, Odometer 2 and the total odometer.

Odometer	
Odometer 1	0 km
Odometer 2	2 km
Odometer Total	2 km
↩=EXIT ↵=OK	

1 indicates which record the user is currently viewing.

Maximum 10 records can be saved in device memory.

1 09/06 17:28:54	
DST	5.72 km
TIM	00:49:51
MAX SPD	22.7 KPH
AVG SPD	1.0 KPH
CAL	177
ALT VAR	131 m
▲▼=DAY ►=NEXT	

Lock the history data to avoid overwriting it:

1. To lock records: Press ↵ LOCK , then press ↵ SET to lock; locked records cannot be overwritten.
2. To unlock: When the **i** icon appears on the upper left corner of the screen, press ↵ UNLOCK to unlock.

History	
LOCK?	
↩=NO ↵=SET	

i	08-04 15:30:22
DST	55.4 KM
TIM	00:00:32
MAX SPD	24.4 KPH
AVG SPD	12.6 KPH
CAL	4465
ALT VAR	-2436 M
◀▶=NEXT ↵=UNLOCK	


History	
UNLOCK?	
↩=NO ↵=SET	

Alert

The Alert function can be set for time, speed, and distance. The asterisk on the right side indicates this option has been set.

To set alerts:

1. Press the Menu button to enter Main Menu.
2. Use the Up/Down button to move to Alert.
3. Press the Enter button to enter Alert submenu.
4. Select Time, Speed, or Distance to open submenu.

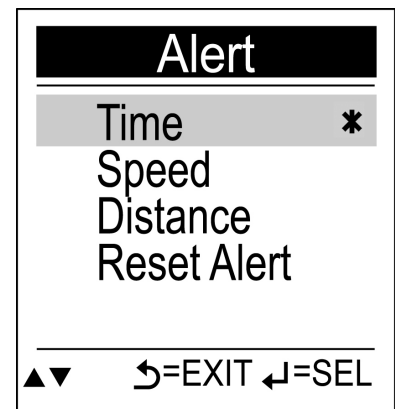


To setup Time Alert:

- i. Press the Left/Right button to move to left/right.
- ii. Press the Up/Down button to adjust the value.



To setup Speed Alert:

- i. Press the Left/Right button to move to left/right.
- ii. Press the Up/Down button to adjust the value.

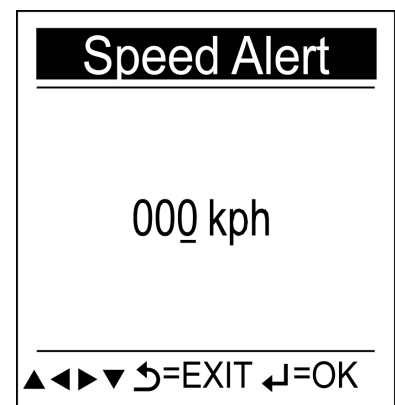

To setup Distance Alert:

- i. Press the Left/Right button to move to left/right.
- ii. Press the Up/Down button to adjust the value.



5. Press the Enter button to confirm setting and return to the Alert submenu.


The following indicators will appear on the message bar:

-  **TIME ALERT**
(appears only when the pre-determined time is due)
-  **DISTANCE ALERT**
(appears only when the pre-determined distance is due)
-  **SPEED ALERT**
(appears only when the pre-determined speed is due)

You can press any key to disable the message.

You may also reset alert by selecting Reset Alert from the Alert submenu:

1. Select Reset Alert.
2. Press the Enter button to confirm.

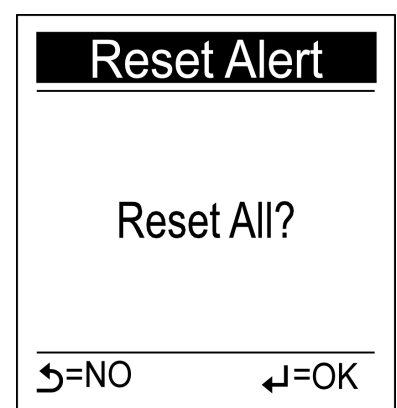


Calorie

Calorie function contains Sport Mode and Weight submenus.

Setup Sport Mode

Choose the Sport mode for calorie calculation.


1. Use the Up/Down button to move to the desired mode.
2. Press the Enter button to confirm and save.

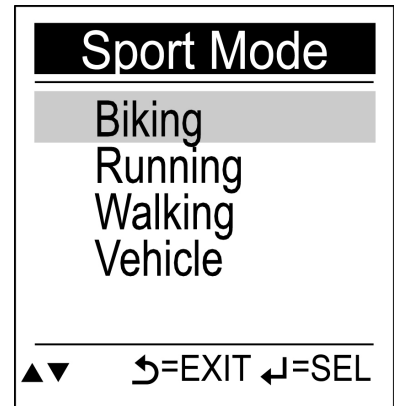

Setup Weight


Input your weight for calorie calculation.

1. Use the Left/Right button to move the cursor to the digit you want to edit.
2. Press the Up button to increase value or the Down button to decrease value.
3. Press the Enter button to confirm and save.

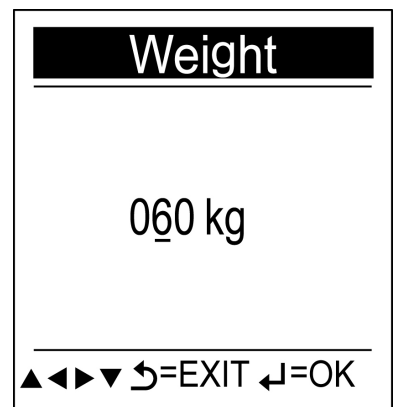


Setting

The Setting function contains 2 submenus: General and System.

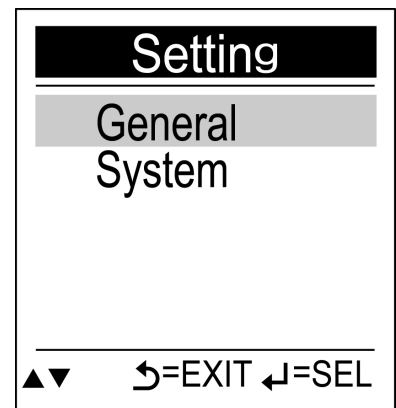


General

General submenu contains Backlight, Auto Flip Page, Log Interval, Log Auto Start, Auto Power Off.

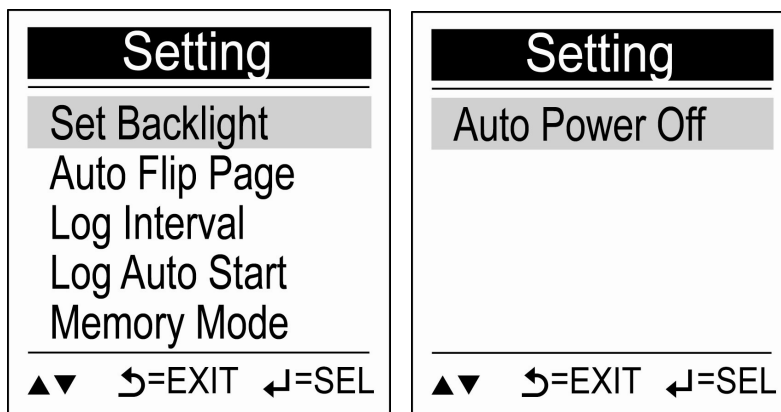

Backlight:

1. Press the Menu button to enter Main Menu.
2. Use the Up/Down button to move to the desired setting for the backlight.
3. Press the Enter button to confirm and save.

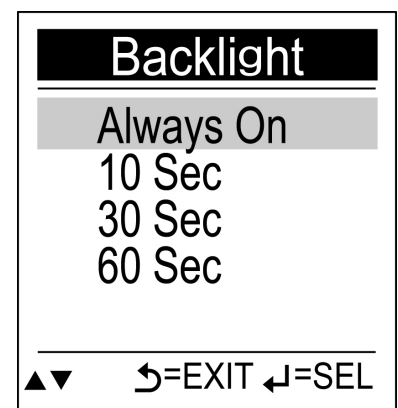

Auto Flip Page:

1. Use the Up/Down button to move to the desired time interval or Manual for manual page flip.
2. Press the Enter button to confirm and save.

Auto Flip Page

Manual

5 sec

10 sec

30 sec

60 sec

▲▼ ↶=EXIT ↷=SEL

Log Interval:

Select either time or distance for your log interval.

Log Interval

Time *

Distance

▲▼ ↶=EXIT ↷=SEL

- **To setup Time Interval:**

1. Press the Left/Right button to move to left/right.
2. Press the Up/Down button to adjust the value.

Time Interval

005 sec

▲◀▶▼ ↶=EXIT ↷=OK

- **To setup Distance Interval:**

1. Press the Left/Right button to move to left/right.
2. Press the Up/Down button to adjust the value.

Dist. Interval

100 m

▲◀▶▼ ↶=EXIT ↷=OK

Log Auto Start function starts log as soon as the satellite is fixed.

1. Press the Up/Down button to select Yes or No to Log Auto Start.
2. Press enter to confirm and save.

Log Auto Start	
Yes	
No	
▲▼ ↵=EXIT ↵=OK	

Memory Mode

1. Overwrite : When the 4MB memory capacity has been reached, GPSport 245 will continue to record and overwrite the oldest information on the memory.
2. Full Stop : When the 4MB memory capacity has been reached, GPSport 245 will stop recording.

Memory Mode	
Overwrite	*
Full Stop	
▲▼ ↵=EXIT ↵=SEL	


Auto Power Off

1. Use the Up/Down button to move to the desired time interval or Manual for Auto Power Off.
2. Press the Enter button to confirm and save.

Auto Power Off	
NO	
15 Min	
30 Min	
1 Hour	
2 Hour	
▲▼ ↵=EXIT ↵=SEL	

System

System submenu allows you to delete all logs, setup time format, setup time zone, setup unit, setup language, GPS Cold Start, LCD Contrast, Odometer, and reset device.

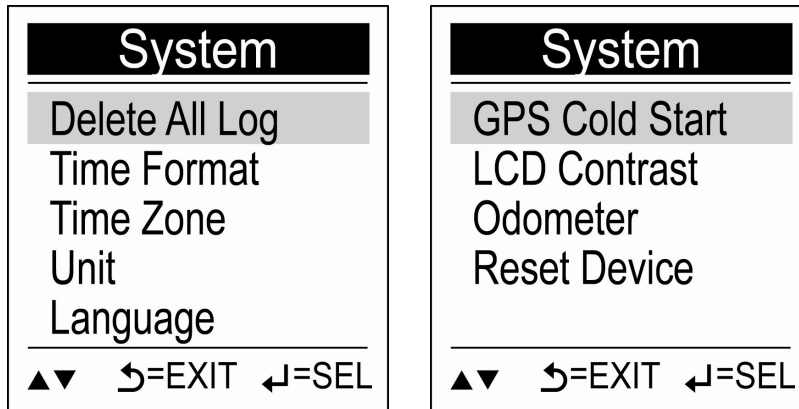


Delete All Log:

1. Select Delete All Log.
2. Press the Enter button to confirm.



Setup Time Format

1. Choose the time format to display.
2. Use the Up/Down button to move to 12:00:00 or 24:00:00.
3. Press the Enter button to confirm and save.

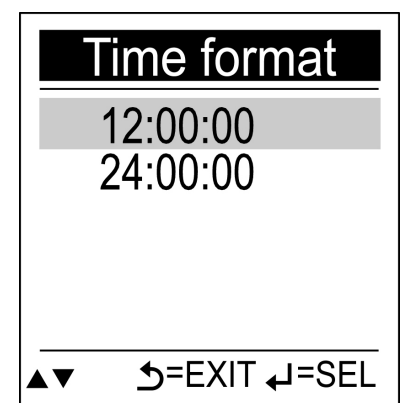

Setup Time Zone

1. Choose your time zone.
2. Use the Up/Down button to move to the desired time zone.
3. Press the Enter button to confirm and save.

Time Zone
UTC +05:00
UTC +06:00
UTC +07:00
UTC +08:00
UTC +09:00

▲▼ ↵=EXIT ↵=SEL

Setup Unit

Choose the type of units to display on the screen.

1. Use the Up/Down button to move to km/m/kg or mi/ft/lb.
2. Press the Enter button to confirm and save.

Unit
km / m / kg
mi / ft / lb

▲▼ ↵=EXIT ↵=SEL

Setup Language

Choose the language displayed on the screen.

1. Use the Up/Down button to move to the desired language.
2. Press the Enter button to confirm and save.

Language
English
Deutsch

▲▼ ↵=EXIT ↵=SEL

GPS Cold Start

If it takes too long for GPSport245 to fix position, say when moving away 300 KM or the device is powered off more than 2 hours;

GPS Cold Start
System will restart.
Are you sure?


↵=NO ↵=OK

perform cold start to reset data in chip to shorten fix time.

LCD Contrast

Choose the LCD Contrast on the screen.

1. Use the Up/Down button to move to the desired LCD Contrast value.
2. Press the Enter button to confirm and save.

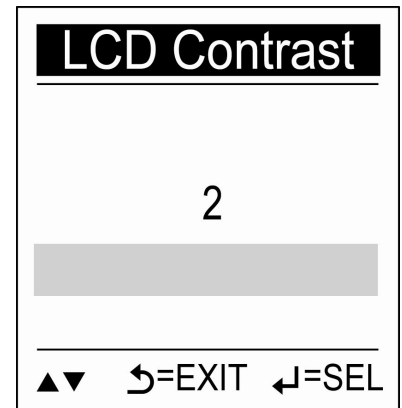


Odometer

Odometer will be mounted when one of the following conditions exists

(1) Press  to manually accumulate the distance.

(2) When the device is turned off.


(3) When battery power is low.

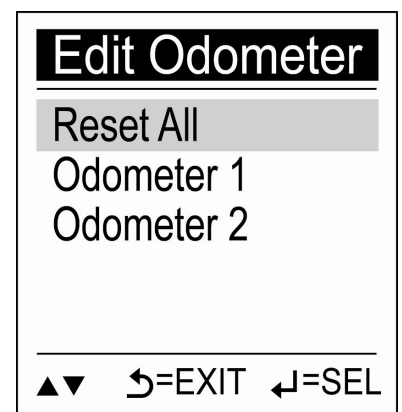

1. Press Up/Down button to select the odometer to erase or edit.
2. Press enter to save.

- **Reset Odometer**


Select Reset All to release all odometer.

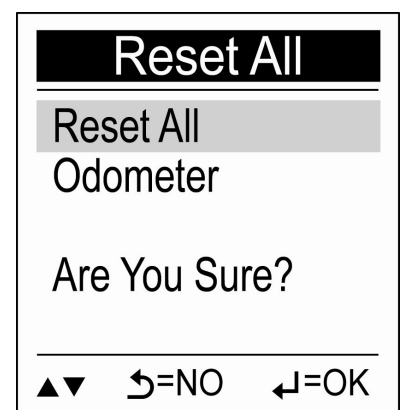

- **Edit Odometer 1 / 2**

Odometer can be edited manually.

1. Press Left/Right button to move the cursor.
2. Press Up/Down button to increase or decrease the number. °

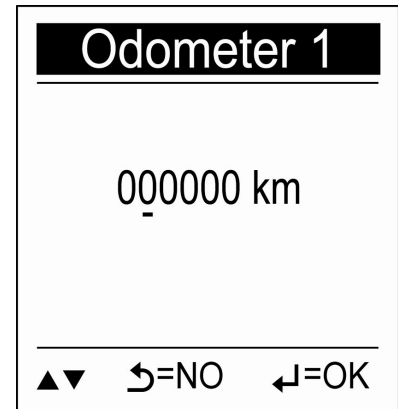


Reset Device

Reset device to the factory setting.

1. Select Reset Device.
2. Press the Enter button to confirm.

Once the device is reset to factory setting, all history will disappear, but log will be kept.

3. On screen display will return to initial setup.

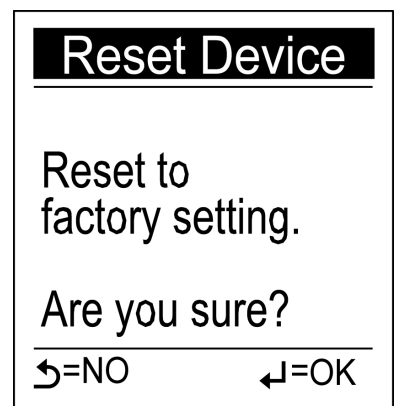


Initial setup

After you reset the device or turn it on for the first time, the initial setup menu will appear on the screen. Follow the step-by-step procedures to setup the common settings in the device: LCD Contrast, Language, Unit, Time format, Time zone, Auto flip page, Weight, and Sport mode.

LCD Contrast

Choose the LCD Contrast on the screen.

3. Use the Up/Down button to move to the desired LCD Contrast value.
4. Press the Enter button to confirm and save.

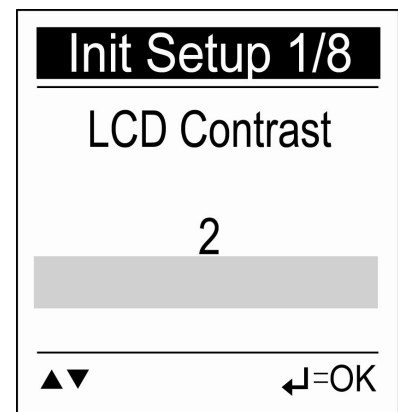

Setup Language

Choose the language displayed on the screen.


1. Use the Up/Down button to move to the desired language.
2. Press the Enter button to confirm and save.



Setup Unit

Choose the type of units to display on the screen.

1. Use the Up/Down button to move

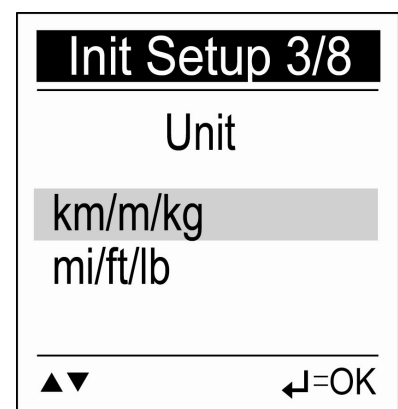

to km/m/kg or mi/ft/lb.

2. Press the Enter button to confirm and save.

Setup Time Format

Choose the time format to display.

1. Use the Up/Down button to move to 12:00:00 or 24:00:00.
2. Press the Enter button to confirm and save.

Init Setup 4/8

Time Format

12:00:00

24:00:00

▲▼
↵=OK

Setup Time Zone

Choose your time zone.

1. Use the Up/Down button to move to the desired time zone.
2. Press the Enter button to confirm and save.

Init Setup 5/8

Time Zone

UTC +06:00

UTC +07:00

UTC +08:00

▲▼
↵=OK

Setup Auto Flip Page

Choose the specified time to change the display among meter, speed, distance, time, altitude, and calorie information.

1. Use the Up/Down button to move to the desired time interval or Manual for manual page flip.
2. Press the Enter button to confirm and save.

Init Setup 6/8

Auto Flip Page

Manual

5 Sec


10 Sec

▲▼
↵=OK

Setup Weight

Input your weight for calorie calculation.


1. Use the Left/Right button to move the cursor to the digit you want to edit.
2. Press the Up button to increase value or the Down button to decrease value.
3. Press the Enter button to confirm and save.

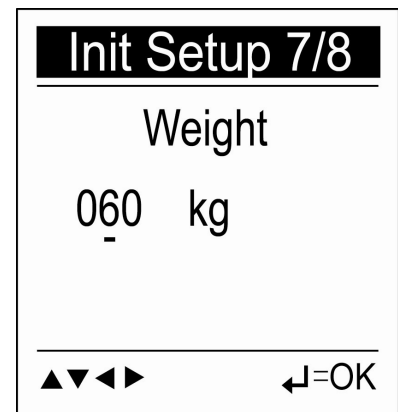

Setup Sport Mode

Choose the Sport mode for calorie calculation.

1. Use the Up/Down button to move to the desired mode.
2. Press the Enter button to confirm and save.

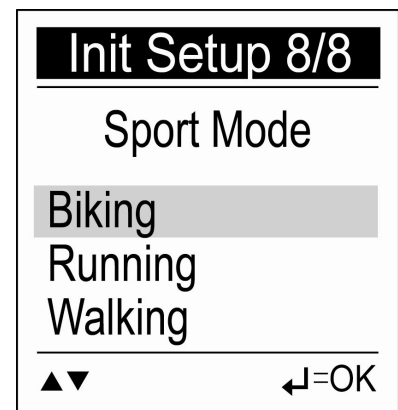

Sport mode also indicates that Log is started. When sport mode icon disappeared, the Log is paused or stopped.



Biking mode: calculate calories burned when bike riding.



Running mode: calculate calories burned when running.



Walking mode: calculate calories burned when walking.



Vehicle mode: calorie calculation is disabled in Vehicle mode.

Troubleshooting

Use this section to solve problems with your GPS. If you are unable to find solve a problem, contact your supplier or a qualified technician.

	Problem	Solution
Power	Cannot start	Insufficient battery charge, please connect to the adapter and restart system.
Screen	No screen displayed	After powering up, if the system does not respond, try the following: 1. Connect adapter, restart system. 2. Hard reset system by pressing both [Enter] + [right arrow] keys.
	Display speed is too slow	1. Check if the battery is low on power. 2. Hard reset system by pressing both [Enter] + [right arrow] keys.
	Screen has no response	Hard reset system by pressing both [Enter] + [right arrow] keys.
Navigation	GPS cannot display my current location	Make sure your current location is not obstructed by buildings or other interferences.

Normal Care and Maintenance

To ensure the unit's normal operation and extended life span, please note the following while using and storing:



Keep dry

This product is not waterproof. If it comes into contact with water spray or is submerged it will seriously damage the components, resulting in irreversible damage.



Do not drop the unit

If violently impacted or shocked, serious damage may be caused.



Avoid sudden temperature changes

Condensation may occur when entering a warm room on a cold day. To prevent condensation from damaging the unit, please place into an airtight plastic bag before sudden temperature changes.



Keep away from strong magnetic fields

When using or storing, please keep away from strong electromagnetic/radioactive or magnetic field equipment.



Operating temperature

The products operating temperature is between 0°C ~ 40°C; please do not operate under extreme temperatures.



Avoid exposure to sunlight

Please avoid long periods of sunlight or high temperature exposure.



Using the stylus

The LCD screen is easily scratched; please use only the stylus for operation. Do not use any other sharp objects on the screen to avoid

damaging the LCD screen.



Cleaning the screen

Using a soft clean cloth to wipe the screen is recommended; do not use ordinary tissue to wipe the screen.



Do not disassemble

Please do not disassemble the product, this may void the warranty and damage the unit.

Storage

When the product is not being used for a long period, store the device in a cool and dry place. For long-term storage, keeping the unit in a dry box is recommended.

Please do not keep the product in the following environments:

1. Unventilated and humid locations.
2. In a car window that is exposed to excessive amounts of sunlight.
3. In an environment where humidity is over 90%.

Specifications

GPS chip	Chipset: MTK 3318 Cold start: 36 sec Warm start: 33 sec Hot start: 1 sec Update Rate: < 1 second continuously
Dimension	81.7x 54x 22 mm
Weight	< 72g
Battery	Rechargeable 1050 mAh Li-Ion Battery
Key	Six buttons: Menu/ESC, Left, Up, Down, Right, Enter/Power
Antenna	Built-in patch antenna
IO interface	Mini-USB
Display	High-contrast electro luminescent back light display 4 level gray scale LCD. Size : 33.5 × 33.5 mm, 1.8" Resolution : 128 × 128 pixels
Environment Temperature	Operating Temp: -10°C to 60°C Storage Temp: -20°C to 70°C
Language Support	Multi-Language (English/French/ German/ Spain/Italian/Dutch/Portuguese/Traditional Chinese/ Simplified Chinese/Japanese)
Waterproof	IPX-6