
**As shown below:**

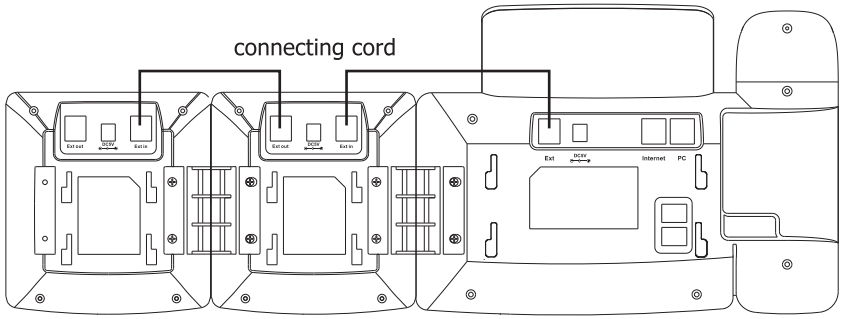



Note: You can connect at most six expansion modules. You just need to connect the Ext in jack of the previous module and the Ext out jack of the next module using a supplied connecting cord.


**Then you can attach the stand, the power adapter and the Ethernet cable to the phone, connect the handset and headset to use.**

## Attaching the Stand

**4. Attach the stand, as shown below:**

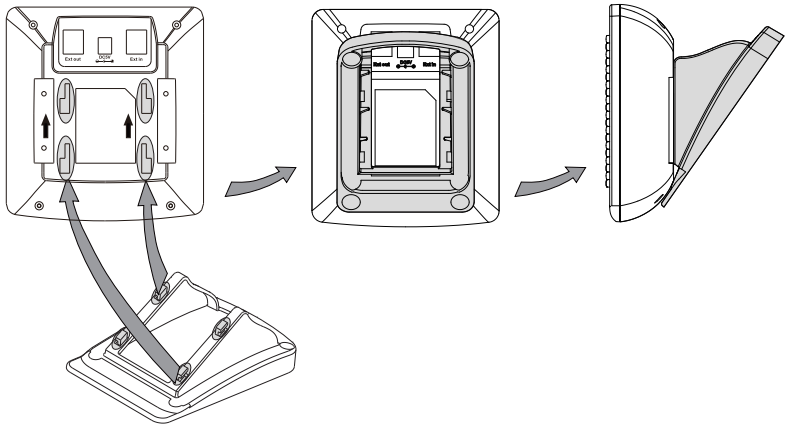


# Expansion Module EXP38

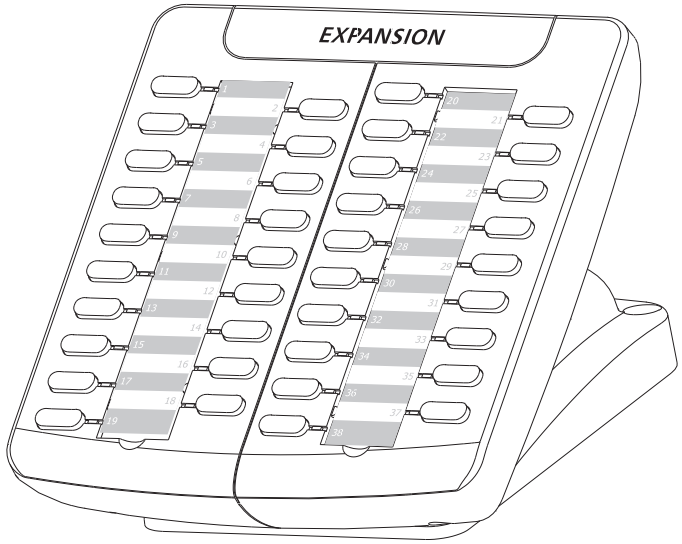



## Quick Installation Guide

**Version 41.1**


## Packaging Contents

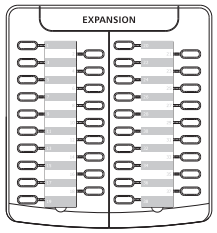



Expansion Module

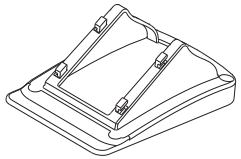


Stand

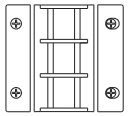

Connecting Sheet




Screw

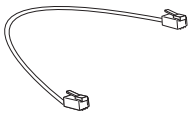


Connecting Cord

## Connecting to the Phone

**1. Connect the EXP38 and the phone using the supplied screws and connecting sheet, as shown below:**

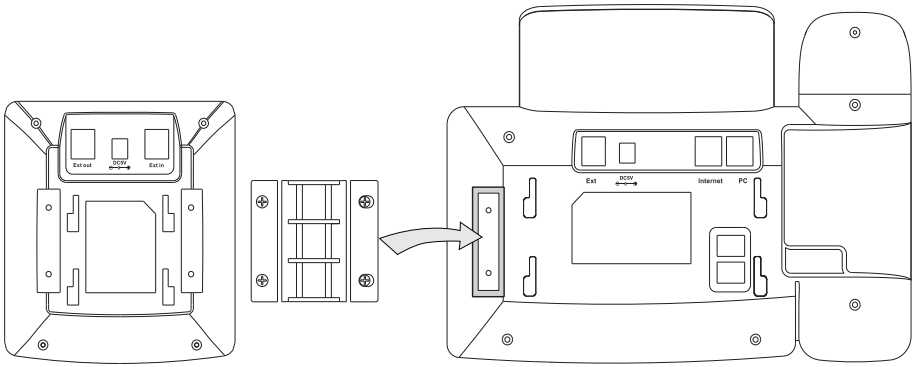



**Connecting one expansion module on the phone is shown as below:**

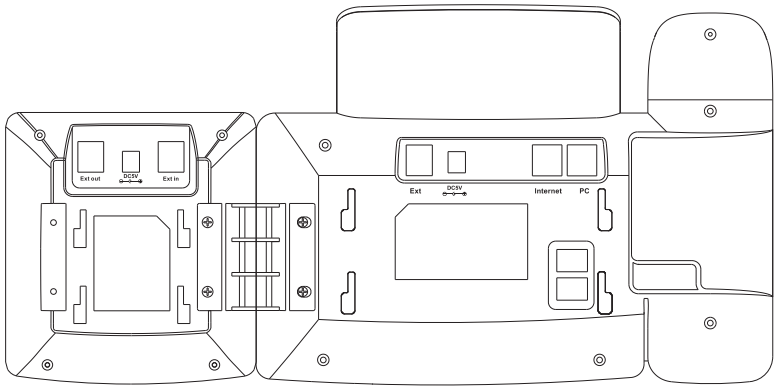



## Connecting to another Module

**2. Follow the same step to connect two expansion modules:**

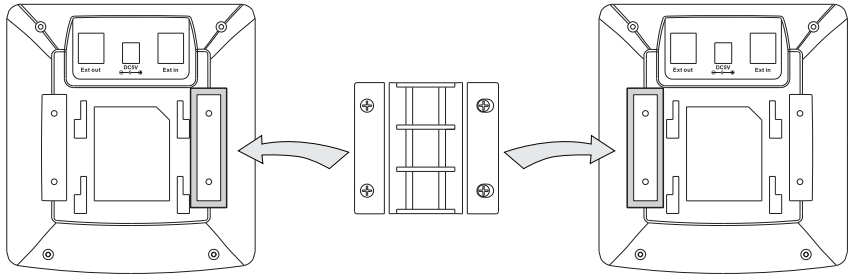


**Connecting two expansion modules on the phone is shown as below:**

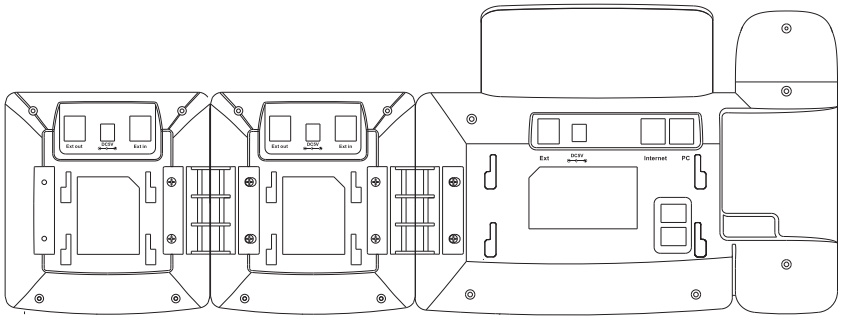


Note: Up to six expansion modules can be connected to an IP phone. If you want to use more than two expansion modules on a single phone, you need to connect an additional power adapter to any one of the expansion modules.

## Connecting the Cords

**3. Connect the Ext jack of the IP phone and the Ext in jack of the first module using one supplied cord. If you want to connect another module, connect the Ext out jack of the first module and the Ext in jack of the second module using one supplied cord.**