




Fanless Computer

Nano-N1141 Product Manual

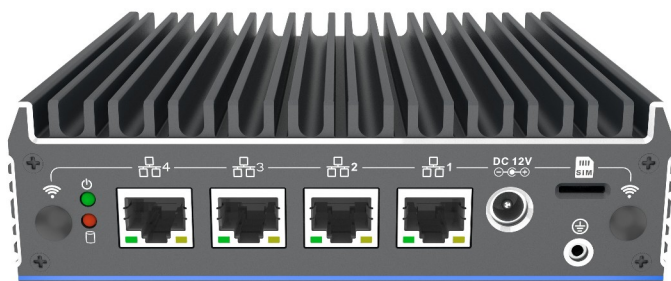

Low-power, fanless embedded micro soft
router
Ver: 1.0

To ensure your personal safety and prevent property damage, please pay attention to the instructions contained in this manual. Instructions relating to property damage do not bear a warning triangle. Warning instructions are listed below, arranged in descending order of hazard level.

 warn

This indicates that failure to take appropriate measures may result in irreparable damage to the machine.

 pay attention to

This indicates that ignoring the relevant warnings may lead to undesirable outcomes or situations.

The products or systems covered by this document may only be operated by qualified personnel who meet all relevant operational requirements.

Operation must comply with the instructions provided in the accompanying documentation, particularly the safety and warning sections. Qualified personnel, possessing the requisite training and experience, can identify the risks associated with this product/system and mitigate any potential hazards.

 warn

Yanling Industrial Control products are intended for use only in the applications specified in the product catalog and related technical documentation. If products or components from other manufacturers are to be used, the recommendation and authorization from Yanling Industrial Control must be obtained. Proper transportation, storage, assembly, fitting, installation, commissioning, operation, and maintenance are essential prerequisites for the safe and proper functioning of the products. The permitted environmental

conditions must be ensured, and the instructions contained in the relevant documentation should be carefully followed.

disclaimer

The Company reserves the right to make amendments to this manual without prior notice should any subsequent changes to the product occur. The Company shall not be liable for any direct, indirect, intentional or negligent damage or hazards arising from improper installation or use of this product.

Before placing an order, please consult your distributor to confirm whether the product's specifications meet your requirements.

Yanling Industrial Control Co., Ltd. © 2012 – All rights reserved. Any unauthorized reproduction, whether mechanical, electronic or otherwise, is strictly prohibited.

Warranty Clause:

The product warranty period is three years. Should the user have any additional requirements, such requirements shall be governed by the contract signed by both parties.

For more information, please visit:

Yanling Website: www.ylgkdn.com

Free Customer Service Hotline: 400-8848-966

catalogue

I. Product Introduction 5.....	5
1.1 Product Overview 5.....	5
1.2 Product Specifications 5.....	5
II. Application Planning 6.....	6
2.1 Transportation 6.....	6
2.2 Storage 6.....	7
2.3 Unboxing and Inspection of Delivered Equipment 6.....	7
2.4 Installation Method 6.....	7
III. Equipment Connection 7.....	8
3.1 Pre-connection Precautions 7.....	8
3.2 Connect the device to the power supply 7.....	8
IV. Instructions for Use 8.....	9
4.1 Product Appearance Diagram 8.....	9
4.2 Product Dimension Drawing 8.....	9
4.3 External Interfaces 9.....	9
4.4 Bottom Floor Plan 10.....	11
4.5 Status Indicator Light 10.....	11
4.6 Install Internal Components 11.....	11
4.7 Pin Definition 12.....	13
V. BIOS Settings 13.....	14
5.1 Equipment Power-On Configuration 14.....	15
5.2 Scheduled Power-On Setting 15.....	16
5.3 BOOT Boot Configuration 16.....	17
VI. Daily Use and Maintenance 17.....	18
VII. Common Hardware Faults and Troubleshooting Methods 18.....	19

I. Product Introduction

1.1 Product Overview

The Nano-N1141 is a fanless mini soft router powered by an Intel® Celeron® J6412 processor, featuring built-in TPM2.0 security encryption. It supports various operating systems including ESXi, PFSense, iKuai, Windows 10/11, and Linux. The device offers both M.2 and 2.5-inch hard drive slots, making it extremely user-friendly.

The entire unit is manufactured using full-aluminum alloy mold forming technology, featuring a simple structure with excellent dust-proofing, heat dissipation, vibration resistance, and EMC performance; it offers high system reliability and strong environmental adaptability.

II. Application Planning

2.1 Transportation

Packaged products may be transported by any means of transport to any destination; however, during long-haul transportation, they shall not be loaded into open ship

Product Specifications & Parameters	
Machine Model	Nano-N1141
Chassis color	Metal Gray (color can be customized)
Chassis material	High-quality full-aluminum alloy
processor	Built-in Intel® Celeron® J6412 processor (quad-core, quad-thread; base clock speed: 2.0 GHz; Turbo Boost up to 2.6 GHz)
internal storage	Supports one DDR4 3200 MHz SODIMM memory slot, up to 32 GB.
BIOS	AMI EFI BIOS
Display Chip	Intel(R) UHD Graphics
Display Interface	1 DP high-definition display interface, 1 HDMI high-definition display interface (Supports synchronized or asynchronous dual displays; maximum interface resolution: 4096×2160 @ 60Hz)
front panell/O	1 power switch, 1 DP interface, 1 RJ45 serial port (supports Console function)
	2 USB 2.0 ports, 2 USB 3.1 ports, 1 HDMI port, 1 power reset button
back panell/O	4 RJ45 Ethernet ports, 1 DC power input interface, 1 SIM card slot
Extended slot	Supports one M.2 2280 M-key slot (compatible with SATA protocol)
	Supports one M.2 2230 E-key slot (supports Wi-Fi and Bluetooth)
	Supports one Mini PCIe slot (supports 4G, external SIM card slot, and USB-powered Wi-Fi/Bluetooth).
network interface	4 Intel i225-V 2.5G Ethernet ports
memory interface	Supports one M.2 2280 slot and one 2.5-inch hard drive bay.
input voltage	Supports DC 12V input

compartments or cargo holds; during intermediate transshipment, they shall not be stored in open-air warehouses; during transportation, they shall not be transported together with flammable, explosive, or corrosive materials (whether by the same vehicle or any other means of transport); furthermore, the products shall not be exposed to rain, snow, liquid substances, or mechanical damage.

2.2 Storage

Products shall be stored in their original packaging boxes. The warehouse environment for storing products shall have an ambient temperature ranging from 0°C to 40°C and a relative humidity ranging from 20% to 85%. The warehouse shall be free from any harmful gases, flammable or explosive materials, or corrosive chemicals; furthermore, it shall be free from strong mechanical vibration, impact, or strong magnetic fields. The packaging boxes shall be placed at least 10 cm above the ground and at least 50 cm away from walls, heat sources, cold sources, windows, or air intake openings.

Be cautious of the risk of damaging the equipment! When transporting machinery in cold weather conditions, be mindful of extreme temperature fluctuations. In such cases, ensure that no water droplets (condensation) have formed on or inside the equipment. If condensation has formed on the equipment, wait at least 12 hours before powering on the device.

2.3 Unboxing and Inspection of Delivered Equipment

When unpacking the equipment, please note the following points:

- We recommend not discarding the original packaging materials; please keep them for future use when transporting the equipment again.
- Please store the document in a secure location; it will be required during the initial device debugging process.
- Inspect the delivered equipment to determine whether any significant damage has occurred during transportation.
- Verify whether the goods shipped include the complete equipment and any accessories you have ordered separately. In the event of any discrepancies or issues,

Transportation damage – please contact our customer service team.

2.4 Installation Method

☐ 19-inch shelved ☒ Desktop ☒ Embedded ☒ Wall-mounted ☐ Portable handheld

3.1 Pre-connection Precautions




Connected or built-in peripheral devices shall not be connected to devices with opposite polarity.



This equipment shall only be operated on a properly grounded power supply network; operating it on a non-grounded or impedance-grounded power supply network is strictly prohibited.




The rated voltage of the equipment in use must comply with the power supply characteristics of this product.



Only peripheral devices that are certified as suitable for industrial applications may be connected. During machine operation, hot-swappable I/O modules (USB) may be connected; I/O devices without hot-swap functionality may only be connected after the device has been disconnected from power.

3.2 Connect the device to a power source

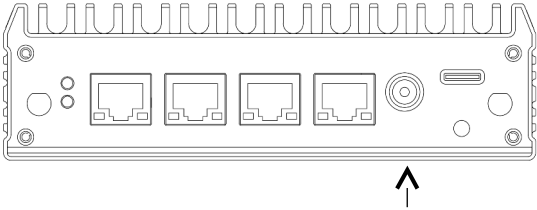How to connect the device to a power source	diagrammatic sketch
Connect the DC 12V power adapter to Power Input Interface ①, then press the power switch on the front panel of the device; the device will boot up, and the blue power indicator light will illuminate.	


 warn

The power-on/off button signal does not cut off the PC power supply!


4.1 Product Appearance Diagram




4.2 Product Dimension Drawing

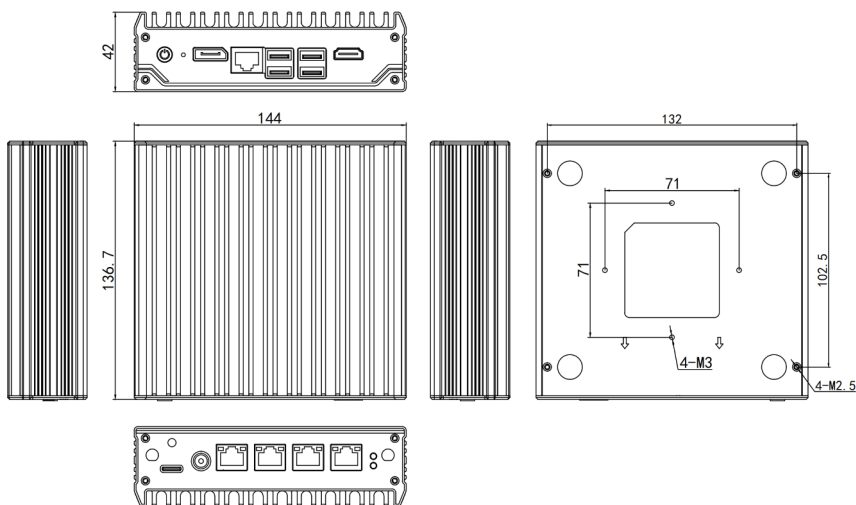


4.3 External Interfaces

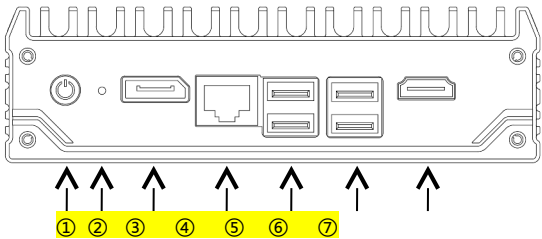Machine Front View	number	Interface Name
	1	Switch button
	2	Resetkey
	3	DP Interface
	4	RJ45 serial port
	5	USB2.0×2
	6	USB3.0×2
	7	HDMI port

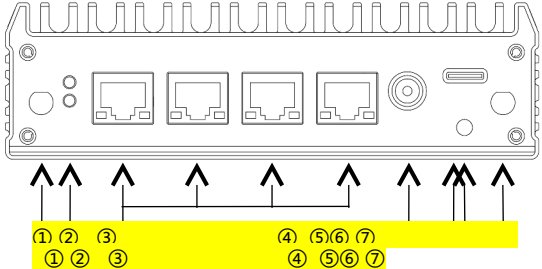Machine Rear View	number	Interface Name
	1、 7	Antenna aperture position
	2	Power supply and hard drive indicator lights
	3	LAN×4
	4	DC 12V power supply interface
	5	SIMcard slot

	6	Grounding hole position
--	---	-------------------------

4.4 Bottom Floor Plan

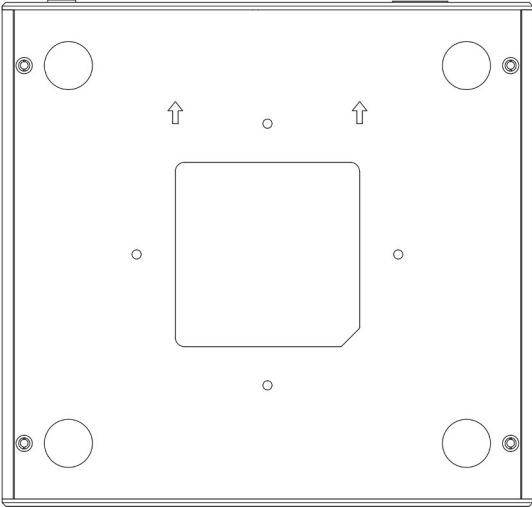
Bottom elevation drawing	Device Components	Screw model
	bottom	M2.5×6 / Cross-head / Silver

4.5 Status Indicator Light


show	meaning	LED	description
POWER	Machine Status Display	Not lit	Device turned off or power supply disconnected
		Always On	Machine in operation

4.6 Install Internal Components

1、 Remove the four M2.5×6 screws from the chassis base plate (as shown in the figure below), then take off the base plate to install accessories such as memory modules, Wi-Fi modules, or M.2 hard drives.

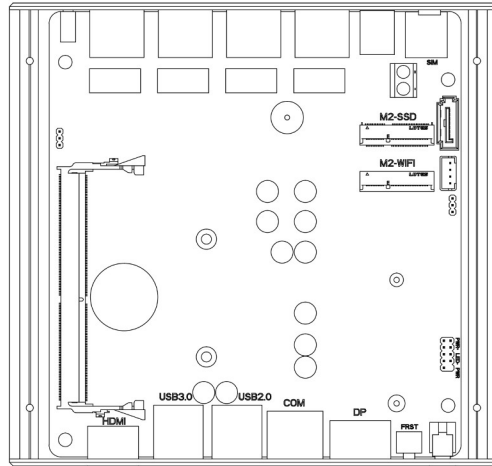

2. After installing the internal components (as shown in the figure below), cover the chassis base plate and secure it with four M2.5×6 screws.

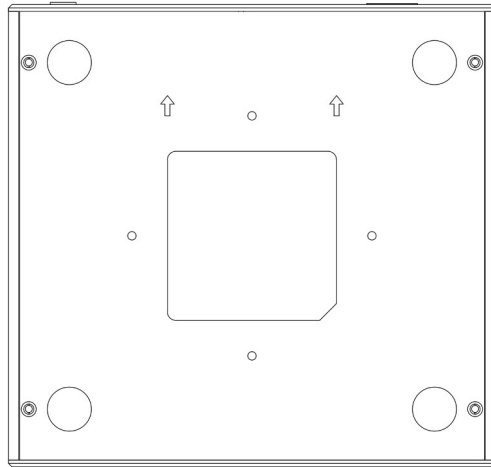

warn

This procedure is only suitable for customers purchasing the Nano-N1141 pre-configured system; customers who have already installed the internal components should not disassemble or assemble the chassis without authorization.

4.7 Pin Definition

Note: The identification method for the first pin (PIN 1) on the motherboard pins is as follows: 1. The pin is marked with a white, thickly printed symbol or an arrow; 2. The pin on the back side of the motherboard features a square hole.



FP1 Definition

信号名称	管脚	管脚	信号名称
HDD LED +	1	2	PWR LED +
HDD LED -	3	4	PWR LED -
Reset SW -	5	6	Power SW +
Reset SW +	7	8	Power SW -
	9	10	

JBATdefinition

管脚	信号名称
1-2	Normal
2-3	Clear CMOS

warn

The internal machine wiring has been installed; the cable plugs and screws have been securely fastened with adhesive. Please avoid disassembling the motherboard or making arbitrary jumper settings, as this may cause damage to the motherboard.


5、 BIOSset up

BIOSbrief introduction

BIOS (Basic Input Output System) contains the most critical basic input/output routines, the POST (Power-On Self-Test) routine, and the system boot routine for the computer. It can read from and write to the CMOS chip to store specific system configuration information; its primary function is to provide the computer with the lowest-level, most direct hardware

configuration and control capabilities. As product BIOSes are updated and optimized periodically, the configuration interfaces may vary slightly; the following interface is for reference only.

The BIOS configuration menu includes the following options (for specific BIOS settings, please contact the Yanling Industrial Control Customer Service Hotline):

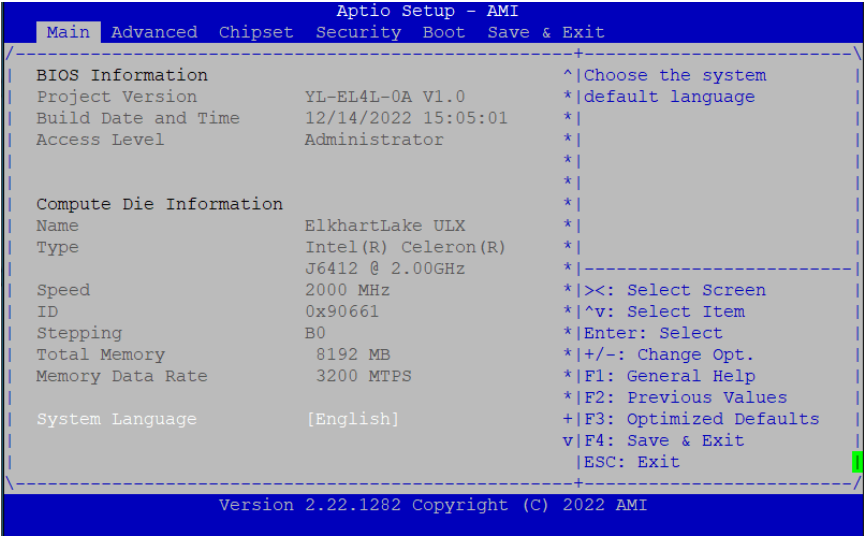


After powering on the device, press the "Delete" key to access the BOIS configuration interface.

- Main: BIOS Information and Date/Time
- Advanced: BIOS Advanced Menu Settings
- Chipset: Chipset Configuration
- Security: Security Settings
- Boot: Boot Options Configuration
- Save & Exit: Save & Exit BIOS Settings

5.1 Equipment Power-On Startup Configuration

"Advanced" → "IT8613 Super IO Configuration" → "Restore AC Power Loss", as shown in

the figure below.

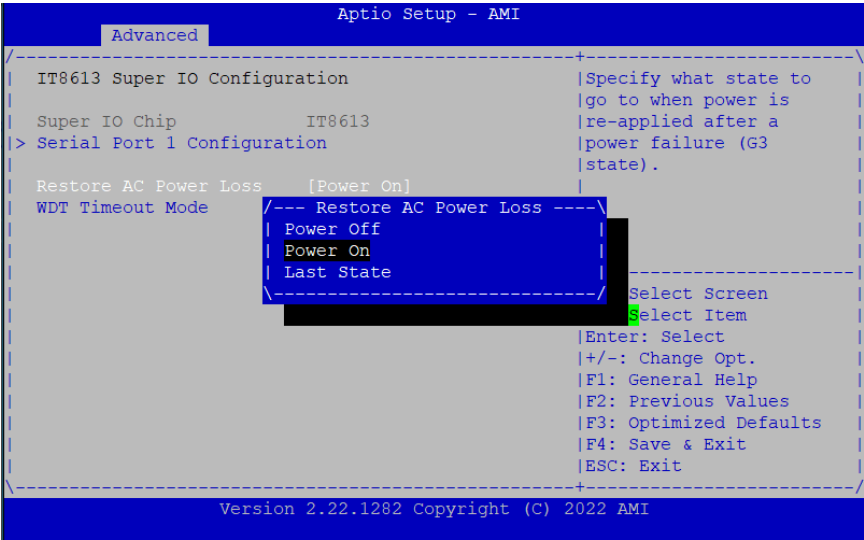

Restore AC Power Loss Function Description:

Power Off: After connecting the device to a 12V power supply, press the power button to turn it on;


Power On: The device will automatically power on upon being connected to a 12V power supply;

Last State: When the device is powered on with a 12V supply, it determines whether to power on based on the device's previous state value.

5.2 Scheduled Power-On Setting

"Advanced" → "S5 RTC Wake Settings" → "Wake System From S5" → "Fixed Time"

As shown in the figure below

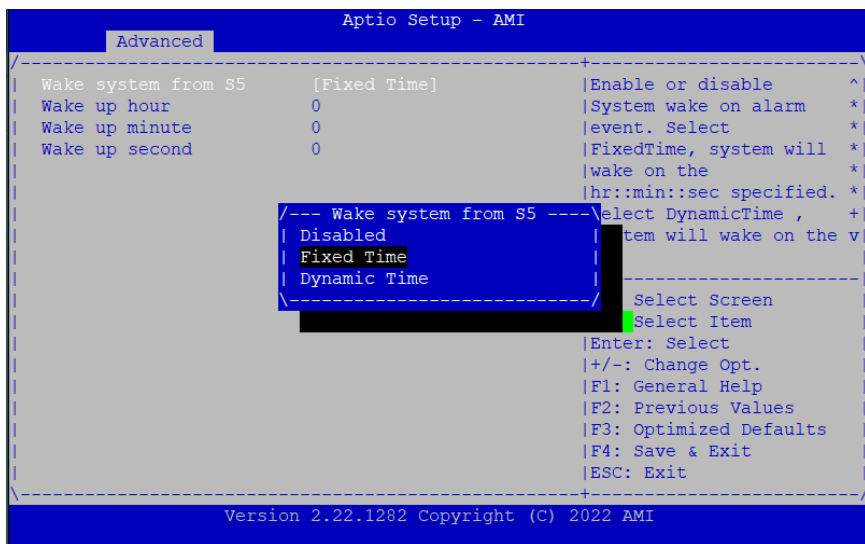


Wake System (From S5) – Function Description:

Wake Up Hour: The wake-up time is measured in hours;

Wake Up Minute: The wake-up time is measured in minutes;

Wake Up Second: The wake-up time unit is seconds.

5.3 BOOT Boot Configuration

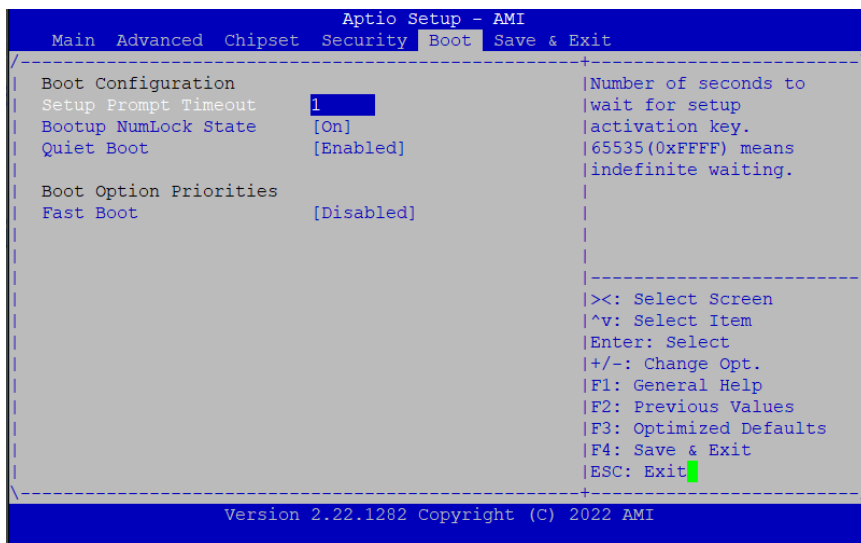

Boot Configuration Function Description:

Setup Prompt Timeout: The duration of the startup logo wait period; time unit: seconds;

Bootup NumLock State: The state of the NumLock key on the keyboard at startup;

Quiet Boot: "Enabled" activates the boot logo; "Disabled" disables the boot logo.

warn

BIOS settings directly impact your computer's performance; incorrect configuration can cause damage to the computer or even prevent it from booting up. Please do not modify

BIOS settings arbitrarily, as this may render your computer unusable.

6、

1. When using the machine under normal operating conditions, please ensure it is operated in a vibration-free environment to prevent damage to the hard drive and internal components. 1. When using the machine under normal operating conditions, please ensure it is operated in a vibration-free environment to prevent damage to the hard drive and internal components.

2. When using the machine, please ensure that the ambient temperature is between 0°C and 40°C.

3. This machine utilizes a housing-based cooling system; to ensure optimal cooling performance, we strongly recommend cleaning the machine's surface every three months. In environments with high dust accumulation, we recommend cleaning the machine's surface once per month. 3. This machine utilizes a housing-based cooling system; to ensure optimal cooling performance, we strongly recommend cleaning the machine's surface every three months. In environments

with high dust accumulation, we recommend cleaning the machine's surface once per month. 3. This machine utilizes a housing-based cooling system; to ensure optimal cooling performance, we strongly recommend cleaning the machine's surface every three months. In environments with high dust accumulation, we recommend cleaning the machine's surface once per month.

4. To ensure the efficient and reliable operation of your machine, we recommend performing a disk cleanup and defragmentation on your hard drive every three months. 4. To ensure the efficient and reliable operation of your machine, we recommend performing a disk cleanup and defragmentation on your hard drive every three months.

5. When using the machine's internal slots, we strongly recommend avoiding plugging or unplugging the device while it is powered on to prevent static electricity damage. In the event of a power outage due to non-human factors, to ensure the machine continues to operate reliably, we strongly advise you to immediately disconnect the power

supply and verify that the power grid is stable before restoring power and restarting the machine. 5. When using the machine's internal slots, we strongly recommend avoiding plugging or unplugging the device while it is powered on to prevent static electricity damage. In the event of a power outage due to non-human factors, to ensure the machine continues to operate reliably, we strongly advise you to immediately disconnect the power supply and verify that the power grid is stable before restoring power and restarting the machine. 5.

When using the machine's internal slots, we strongly recommend avoiding plugging or unplugging the device while it is powered on to prevent static electricity damage. In the event of a power outage due to non-human factors, to ensure the machine continues to operate reliably, we strongly advise you to immediately disconnect the power supply and verify that the power grid is stable before restoring power and restarting the machine. 5. When using the machine's internal slots, we strongly recommend avoiding plugging or unplugging the device while it is powered on to prevent static electricity damage. In

the event of a power outage due to non-human factors, to ensure the machine continues to operate reliably, we strongly advise you to immediately disconnect the power supply and verify that the power grid is stable before restoring power and restarting the machine.

6. We recommend that machinery be used exclusively for specific purposes and be under the dedicated management of designated personnel.

order number	fault phenomenon	analysis of causes	Maintenance Method
1	The device does not turn on when the power button is pressed.	The power adapter is not supplying power.	Please securely plug in the three-core power cord or replace the socket position; Replace the power adapter;
		Mainboard damaged	Return to the factory for repair;
2	The monitor shows no image.	The signal input may not be properly connected.	Check whether the computer has booted normally; verify whether the power indicator light on the monitor is lit; check whether the display cable connections are correct;
		The monitor is in power-saving mode.	Press any key on the keyboard
3	Unable to boot into the system upon startup	Hard drive power cable or data cable damaged	Check whether the power cable and data cable for the hard drive (the hard drive must be pre-installed with a bootable operating system) are loose or disconnected.
4		Hard drive system files are corrupted.	Use a bootable CD (typically the WINPE system) to boot the computer and check whether the hard drive's operating system is damaged; if necessary, it is advisable to reinstall the operating system.
5	A continuous "beep" sound occurs upon powering on.	No memory detected.	Open the chassis and re-seat the memory modules;



warn

When you need to open the chassis or access the BIOS settings, non-professional users should follow the steps under the guidance of a qualified technician.

